

MEGApix® Ai CaaS™ Bullet IP Camera

DWC-XSBA08MiC1 - Serverless 4K bullet IP camera with AI engine

DWC-XSBA05LiPC1 - Serverless 5MP bullet IP camera with ALPR and AI engine



User's Manual Ver. 06/25

Before installing and using the camera, please read this manual carefully.
Be sure to keep it handy for future reference.

Safety Information



Read this first

Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future reference. See the complete user manual for more information on the product's proper installation, use and care.

These instructions ensure users can use the product correctly to avoid danger or property loss. The precaution measure is divided into "Warnings" and "Cautions":

Warnings: Serious injury or death may occur if any warnings are neglected.

Cautions: Injury or equipment damage may occur if any cautions are neglected.

	<div style="background-color: black; color: white; padding: 5px; margin-bottom: 5px;">CAUTION</div> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">RISK OF ELECTRIC SHOCK. DO NOT OPEN.</div>	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



Warning

This symbol indicates that dangerous voltage, a risk of electric shock, is present within this unit.



Precaution

This exclamation point symbol is intended to alert the user to important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING

1. In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. The device shall be firmly fixed when the product is mounted on a wall or ceiling.
2. Be sure to use only the standard adapter specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product.
3. Make sure the power supply voltage is correct before using the camera.
4. Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product.
5. Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire.
6. Securely plug the power cord into the power source. An insecure connection may cause a fire.
7. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury.
8. Do not install in a location subject to elevated temperature, low temperature, or high humidity. Doing so may cause fire or electric shock.
9. Do not place conductive objects (e.g., screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects.
10. Do not install the unit in humid, dusty, or sooty locations. Doing so may cause fire or electric shock.
11. Do not install near any heat sources, such as radiators, heat registers, or other products (including amplifiers) that produce heat.
12. Keep out of direct sunlight and heat radiation sources. It may cause a fire.
13. Stop using the product immediately if any unusual smells or smoke come from the unit. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock.
14. If this product does not operate normally, contact the nearest service center. Never disassemble or change this product in any way.
15. When cleaning the product, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock.

Precaution

1. Use proper safety gear when installing and wiring the product.
2. Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive vibration or magnetic interference.
3. Do not use this product near water.
4. The product shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the product.
5. Avoid aiming the camera directly toward extremely bright objects, such as the sun, which may damage the image sensor.
6. The main plug is used as a disconnect device and shall remain readily operable at any time.
7. Remove the power adapter from the outlet when there is lightning. Neglecting to do so may cause fire or damage to the product.
8. Do not block any ventilation openings. Install following the manufacturer's instructions.
9. A polarized or grounding-type plug is recommended for this product. A polarized plug has two blades, one wider than the other. A grounding-type plug has two blades and a third grounding prong. If the provided plug does not fit your outlet, consult an electrician for replacement.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and where they exit from the product.

Important Safety Instructions

11. If any laser equipment is used near the product, ensure the sensor's surface is not exposed to the laser beam, which may damage the sensor module.
12. If you want to move the installed product, turn off the power and then move or reinstall it.
13. The installer and/or end-user must properly configure all passwords and other security settings.
14. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt.
15. Do not touch the camera's lens or sensor module with your fingers. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device from dirt.
16. Use only attachments/accessories specified by the manufacturer.
17. Always use hardware (e.g., screws, anchors, bolts, locking nuts, etc.) compatible with the mounting surface and of sufficient length and construction to ensure a secure mount.
18. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the product.
19. Unplug this product when a cart is used. Use caution when moving the cart/product combination to avoid injury from tip-over.
20. Refer all servicing to qualified service personnel. Servicing is needed when the product has been damaged in any way, such as a power supply cord or plug is damaged, liquid has been spilled, objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



Copyright © Digital Watchdog 2025. All rights reserved. Specifications and pricing are subject to change without notice.

Legal considerations

Video surveillance can be regulated by laws that vary by region. Check the laws in your local region before using this product for surveillance purposes.

Liability

Regarding the preparation of this document, Digital Watchdog cannot be held responsible for any technical or typographical errors and reserves the right to make changes to the product and manuals without notice.

Digital Watchdog makes no warranty of any kind regarding the written material contained within this document. Digital Watchdog shall not be held liable or responsible for any incidental or consequential damages concerning this documented material's furnishing, performance, or use. This product is only to be used for its intended purpose.

Equipment modifications

This equipment must be installed and used in strict accordance with the instructions given in the user documentation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to use the equipment.

Trademark acknowledgments

Digital Watchdog, DW, DW Spectrum, MEGApix and Star-Light are registered trademarks or trademark applications of Digital Watchdog in various jurisdictions.



microSD, microSDHC, and microSDXC Logos are trademarks of SD-3C LLC. microSD, microSDHC and microSDXC are trademarks or registered trademarks of SD-3C, LLC in the United States, other countries, or both.

Regulatory Information

USA



This device complies with part 15 of the FCC Rules, subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to protect reasonably against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used following the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Suppose this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. In that case, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Important Information

Canada

This digital apparatus complies with CAN ICES-3 (Class B). The product shall be connected using a shielded network cable (STP) that is properly grounded. Cet appareil numérique est conforme à la norme CAN NMB-3 (classe B). Le produit doit être connecté à l'aide d'un câble réseau blindé (STP) qui est correctement mis à la terre.

Safety

- This product is intended to be supplied by a Listed Power Supply Unit marked "Class 2" or "LPS" or "PS2" and rated from 12Vdc, 1.1A or POE(802.3at) 0.3A min.
- The wired LAN hub provides power over the Ethernet (PoE) in accordance with IEEE 802.3at shall be a UL Listed device with the output evaluated as a Limited Power Source as defined in UL60950-1 or PS2 as defined in UL62368-1.
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Unit is intended for installation in a Network Environment O as defined in IEC TR62102. As such, associated Ethernet wiring shall be limited to inside the building.
- The caution phrase include battery only applicable for the products for battery used models.
- Do not install and use the wrong type of battery.
- Do not leave the battery in a mechanically crush or cut it because it can explode.
- Do not leave the battery in a high temperature environment.
- Do not leave the battery in a low-pressure environment.
- Ce produit est destiné à être alimenté par un bloc d'alimentation homologué portant la mention "Classe 2" ou "LPS" ou "PS2" et une tension nominale de 12 Vdc, 1.1A ou POE(802.3at) 0.3A min.
- Le concentrateur LAN câblé fournit une alimentation par Ethernet (PoE) conformément à la norme IEEE 802.3at doit être un dispositif homologué UL dont la sortie est évaluée comme une source d'alimentation limitée telle que définie dans la norme UL60950-1 ou PS2 telle que définie dans la norme UL62368-1.
- MISE EN GARDE : Ces instructions d'entretien sont réservées à un personnel d'entretien qualifié. Pour réduire le risque de choc électrique, n'effectuez aucune opération d'entretien autre que celle décrite dans le mode d'emploi, à moins que vous ne soyez qualifié pour le faire.
- L'appareil est destiné à être installé dans un environnement de réseau O tel que défini dans la norme IEC TR62102. Ainsi, le câblage Ethernet associé doit être limité à l'intérieur du bâtiment.

Disposal and recycling

- Digital Watchdog cares for the environment at all product manufacturing stages and is taking measures to provide customers with more environmentally friendly products. When this product has reached the end of its useful life, dispose of it according to local laws and regulations. For information about your nearest designated collection point, contact the local authority responsible for waste disposal. Following local legislation, penalties may be applicable for incorrect disposal of this waste.

Warranty information

For information about Digital Watchdog's product warranty and related information, go to <https://digital-watchdog.com/page/rma-landing-page/>.

Regular part replacement: a few parts (e.g. electrolytic capacitor) of the equipment shall be replaced regularly according to their average enduring time. The average time varies because of differences between the operating environment and using history, so regular checking is recommended for all the users. Please contact your dealer for more details.

Support

Contact your Digital Watchdog installer or reseller for any questions, help and troubleshooting. If your questions cannot be answered at once, your installer will forward your questions to ensure a rapid response. If you are connected to the Internet, you can:

- Download user documentation and software updates from Digital Watchdog's website.
- Find answers to resolved problems in the FAQ database.
- Visit Digital Watchdog's Support at <https://digital-watchdog.com/DW-Tech-Support/>.

Table of Contents

Introduction

Product and Accessories.....	6
Parts Names.....	7

Installation

Moisture Absorber Installation.....	8
Factory Reset.....	8
Installation.....	9
Cabling.....	11

Network Setup

DW IP Finder.....	13
-------------------	----

Web Viewer



Login to the Camera.....	14
GUI Overview.....	15

Camera Settings


Settings > Video and Audio Setup.....	18
Settings > Camera Setup > Image Adjustment.....	25
Settings > Camera Setup > Exposure Settings.....	26
Settings > Camera Setup > Day and Night Settings.....	27
Settings > Camera Setup > Backlight Settings.....	28
Settings > Camera Setup > White Balance Settings.....	29
Settings > Camera Setup > Image Enhancement Settings.....	30
Settings > Camera Setup > Video Enhancement Settings.....	31
Settings > Network Setup.....	32
Settings > Trigger Action Setup.....	43
Settings > Event Setup.....	47
Settings > Record Setup.....	52
Settings > Security Setup.....	58
Settings > System Setup > System Information.....	66
Settings > System Setup > Firmware.....	69
Settings > System Setup > Date and Time.....	70
Settings > System Setup > DST.....	71
Settings > System Setup > Users.....	72
Settings > System Setup > System Log.....	73
Settings > System Setup > Factory Reset.....	74
Settings > System Setup > Restart.....	75
Settings > System Setup > System Open Source License.....	76
Settings > System Setup > Plug-in.....	77

Appendix.....	78
FAQs.....	85
Dimensions.....	86
Specifications.....	87
Warranty.....	88
Limits and Exclusions.....	89


Introduction - Product & Accessories

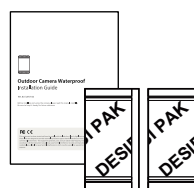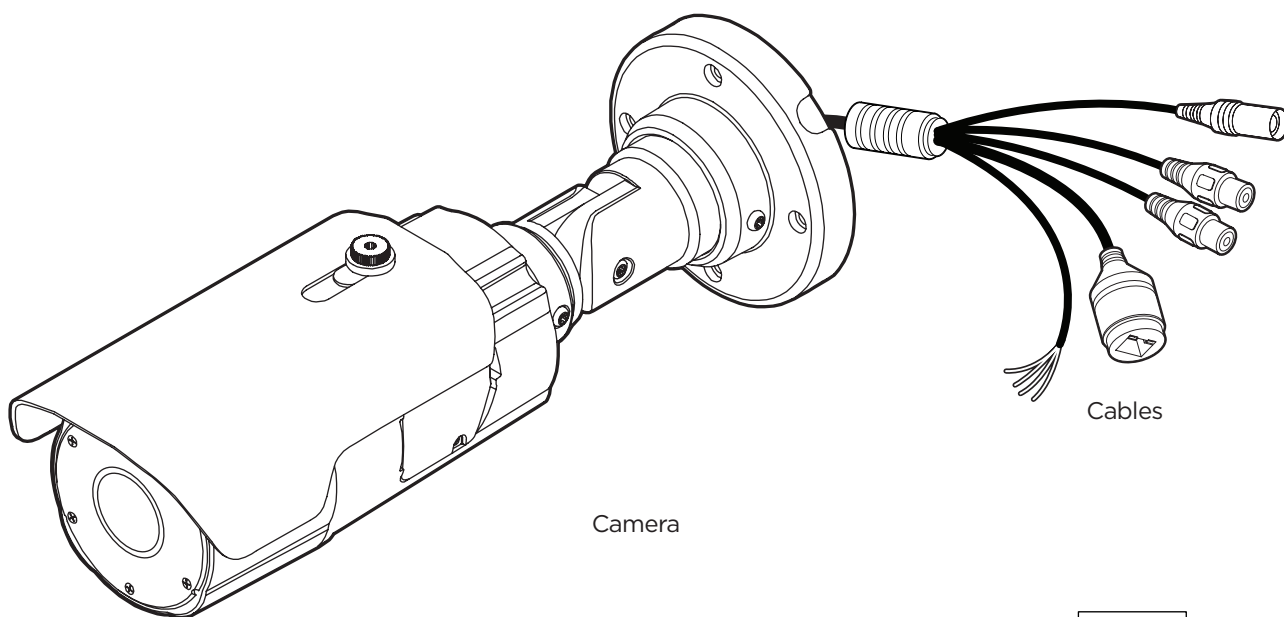


2x Moisture Absorber
and Installation Guide




Star Wrench T-10




Star Wrench T-20




Screws and
Plastic Anchor - 4pcs



PoE injector and
power cable (optional)

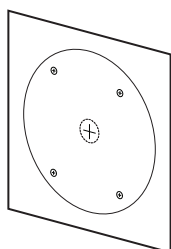

Mounting Template



Waterproof Cap
and Gasket




Quick Installation and
Download Guides




Test Monitor Cable

Introduction - Part Name

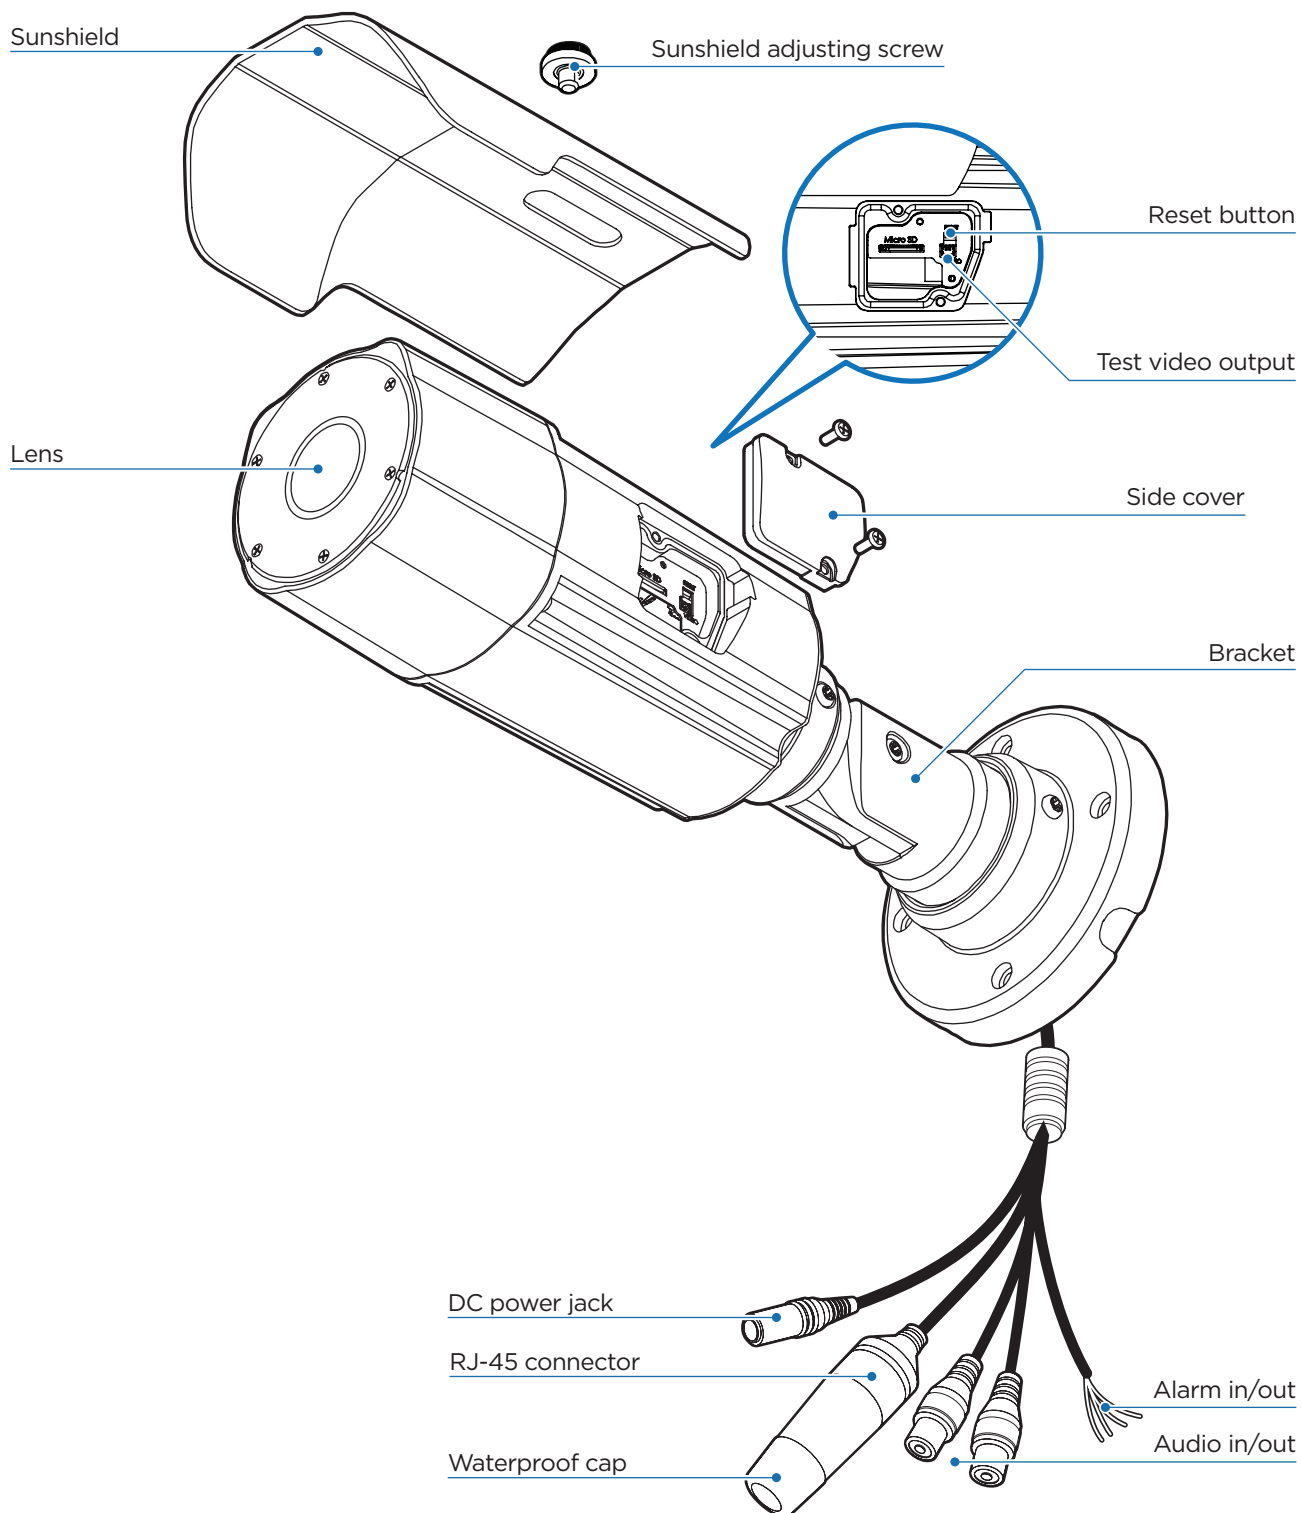

Installation - Installation

1. The mounting surface must withstand five times the camera weight.
2. Do not let the cables get caught in improper places, or the electric line cover can be damaged. This may cause a short or fire.
3. For the installation process, remove the sun-shield cover as needed.
4. Remove the moisture absorber packet from the camera's control panel. Use the T-10 star wrench included with the camera to open the control panel.
5. Install the new moisture packet in the camera's control panel.
 - a. Remove the moisture absorber packet from the packaging.
 - b. Place the moisture absorber packet under the camera's SD card slot.

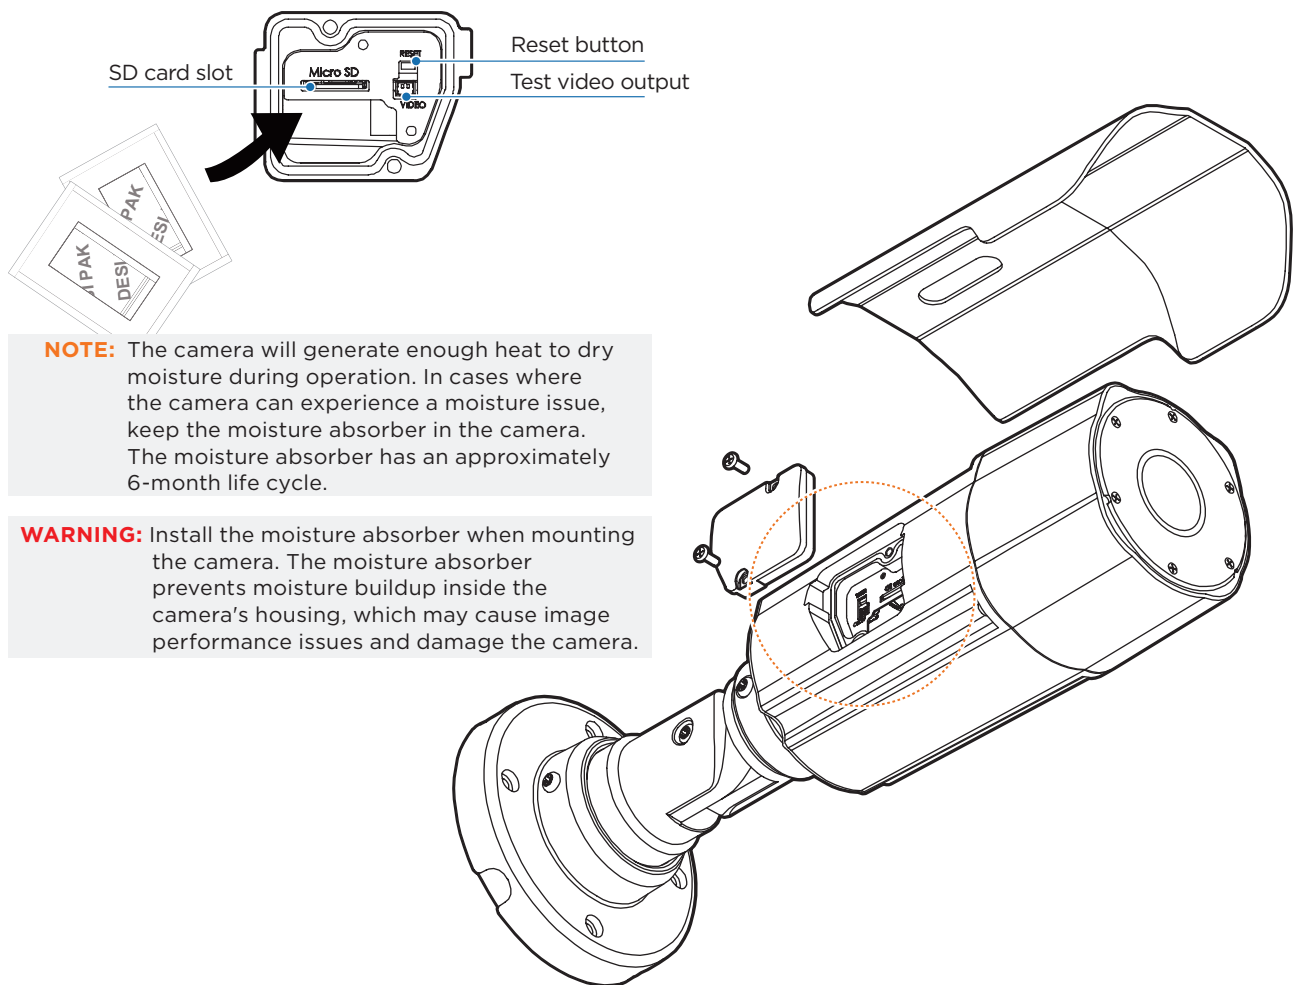

Reset Button

Micro SD

Resetting the camera:
With the camera powered ON, press the reset button for five (5) seconds to initiate a camera-wide reset of all the settings, including network settings.


Warning:
Pressing the 'Reset' button, will initiate a system-wide reset, and you will lose all settings. Use the export settings tool or take note of the camera settings as needed.

Installation - Installation

1. Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.
2. Once all cables are connected, secure the camera to the mounting surface using the included screws.
3. Waterproof cap installation (see next page)
4. Mount the camera to the mounting surface and secure using the screws and anchors included. If you are mounting the camera directly on the mounting surface, with no mounting accessory, remove the rubber plug on the side of the camera's bracket and use the gap as a cable guide.

NOTE: When setting up the camera for the first time, use the CALIBRATE button on the camera's web GUI to auto calibrate the camera's lens before operation.

5. Loosen the pan and tilt screws at the base of the camera's bracket to adjust the camera's view and position.
6. Remove the protective film from the lens cover. Softly wipe the dome/lens cover with lens tissue or a microfiber cloth with ethanol to remove any dust or smudges left from the installation process.
7. Loosen the pan and tilt screws at the base of the camera's bracket to adjust the camera's view and position.

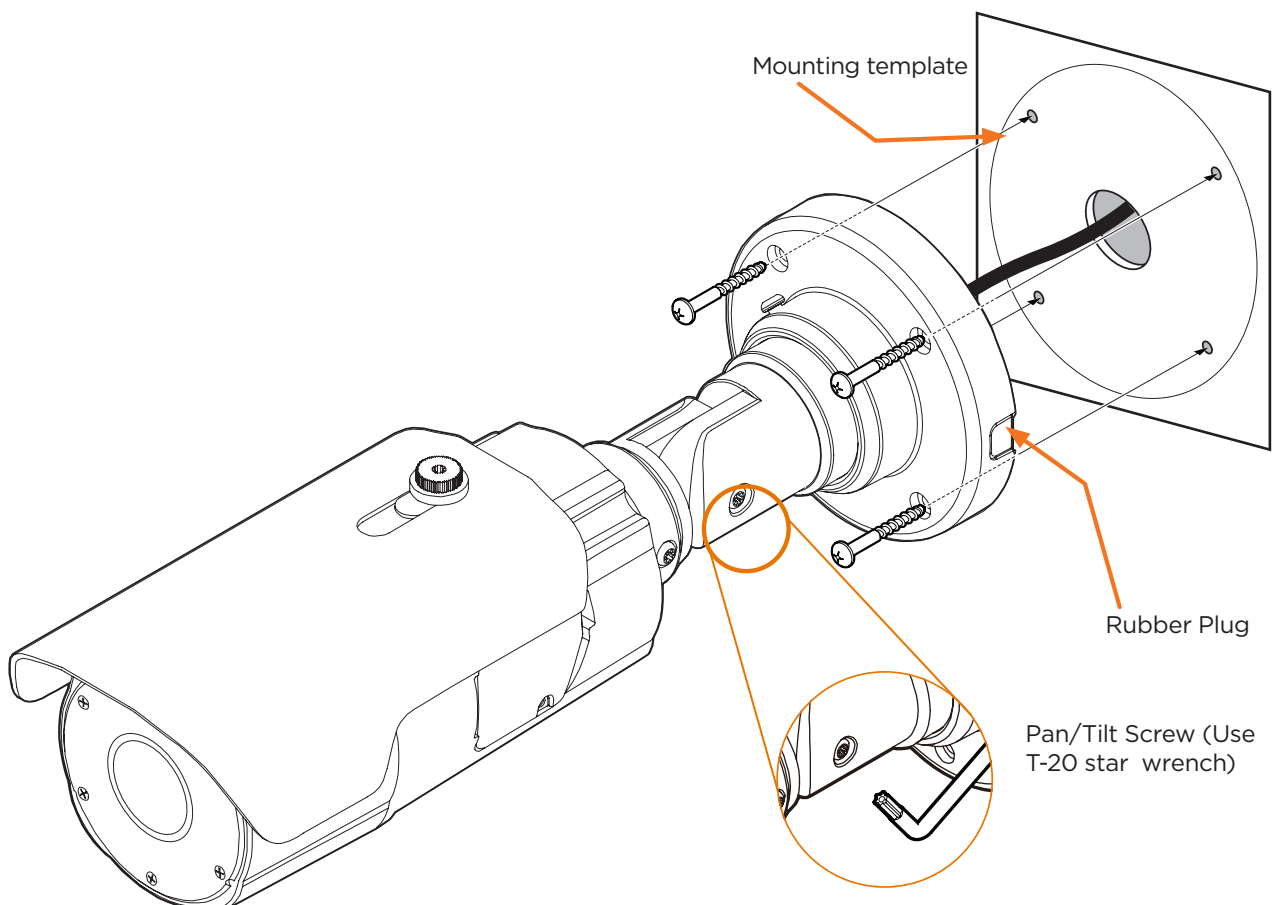


Installation - Installation

Waterproof cap installation:

The waterproof cap set comes with two rubber rings. Use the rubber ring that is best sized for your network cable's diameter.

NOTE: Cables with $\varnothing 4.5\text{mm}$ to $\varnothing 5.5\text{mm}$ thickness should use the black rubber ring. Cables over $\varnothing 5.5\text{mm}$ in thickness should use the white rubber ring.


NOTE: To ensure moisture seal, make sure the o-ring **d** is in place between **c** and **e**. In extreme environments use of an outdoor rated sealer is recommended.

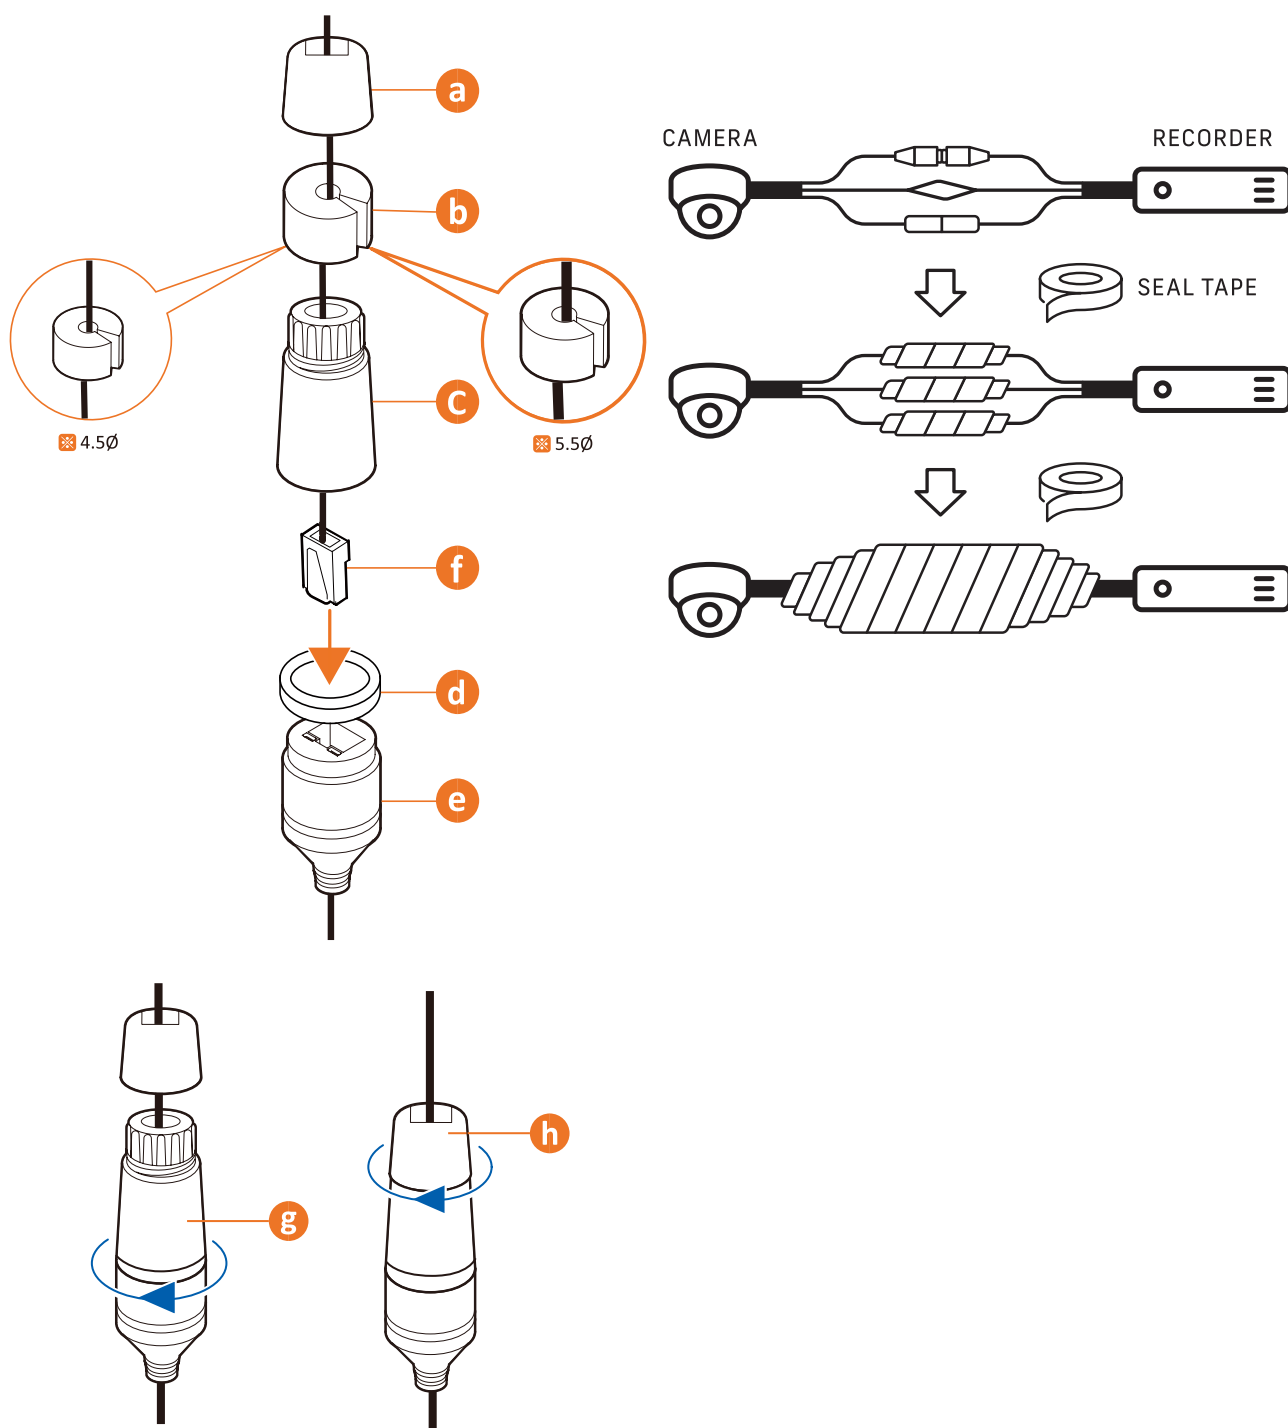

Installation - Cabling


Pass the wires through and make all necessary connections.

Use a PoE Injector (required. Sold separately) to connect data and power to the camera using a single Ethernet cable.

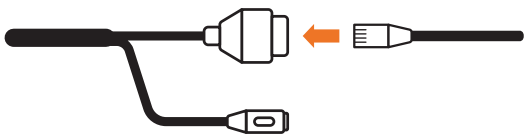


OR

Use a non-PoE Switch to connect data using an Ethernet cable and use a power adapter to power the camera.

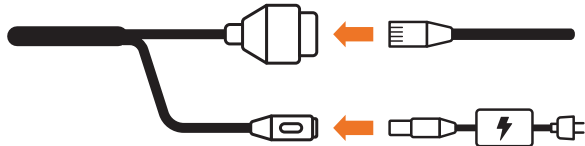

Power requirements	Power consumption
DC12V, PoE, adapter not included	DC12V: max 13.2W, 1.1A PoE: 14.8W

Installation - Cabling

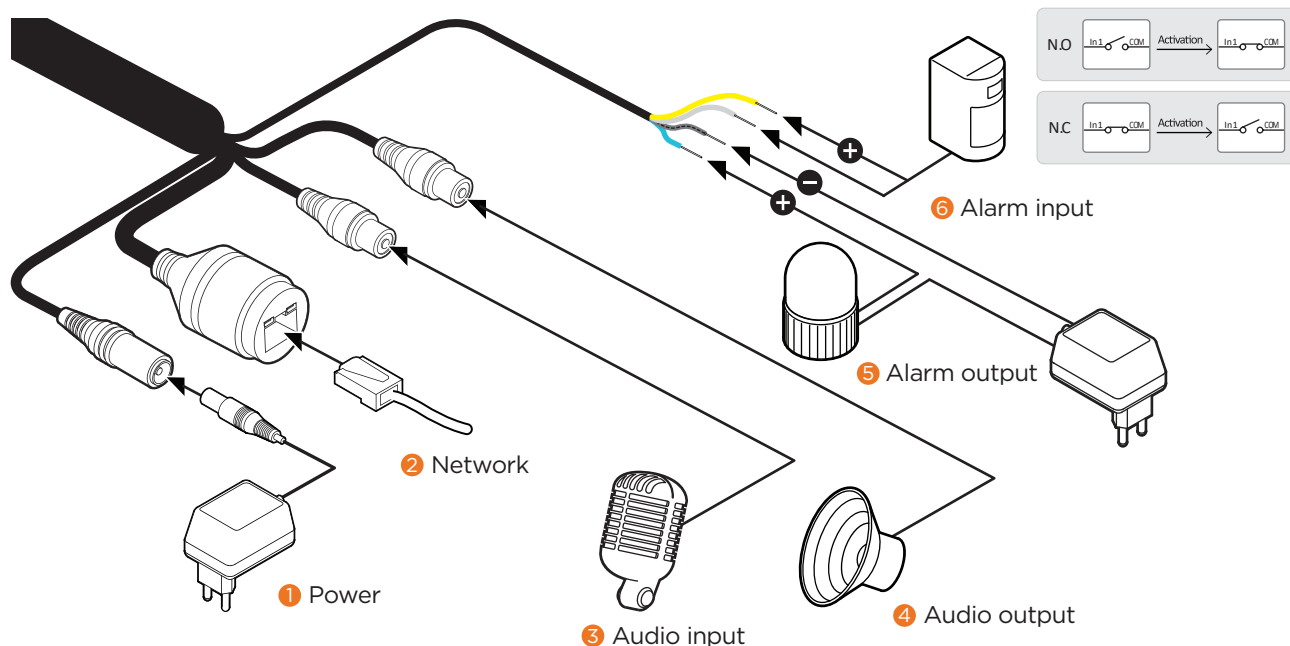

1. Power

Use a non-PoE Switch to connect data using an Ethernet cable and use a power adapter to power the camera.

Power requirements	Power consumption
DC12V, PoE, adapter not included	DC12V: max 13.2W, 1.1A PoE: 14.8W

2. Network Connection

See page 11 for connection options.

3. Audio in

Connect the 'audio in' port of the camera to the microphone directly or the 'line out' port of the amplifier connected with a microphone.

⚠ If the microphone is connected directly, the microphone with the embedded amplifier, such as a condenser microphone, needs to be used.

4. Audio out

Connect the 'audio out' port of the camera to the 'line in' port of the speaker.

⚠ If a speaker is connected to the audio output without an amplifier, it will not work properly. A speaker with an amplifier or a separate amplifier is needed.

5. Alarm out/relay out (DO)


Connects to the alarm lights, siren or lamps and the sensor types are normal open and normal close.

6. Sensor/alarm input (DI)


The sensor/alarm input device's cable should connect to the + and - of the Terminal Block.

7. SD card slot

See page 13.

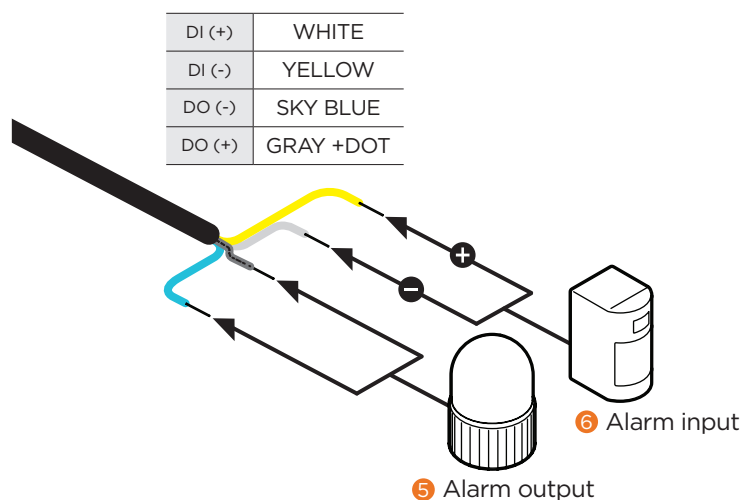

Network Set up - DW IP Finder

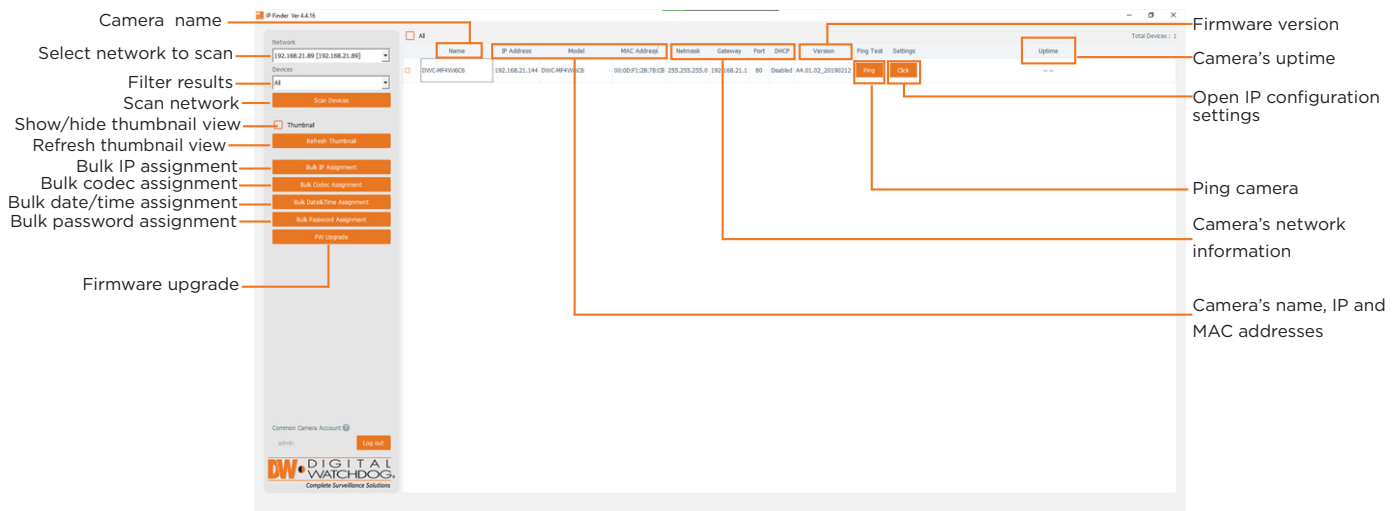

- 1 To install the DW IP Finder, go to <http://www.digital-watchdog.com>
- 2 Enter "DW IP Finder" on the search box at the top of the page.
- 3 Go to the "Software" tab on the DW IP Finder page to download the installation file.
- 4 Follow the installation to install the DW IP Finder. Open the DW IP Finder and click 'Scan Devices.' It will scan the selected network for all supported devices and list the results in the table. During the scan, the DW® logo will turn gray.
- 5 A password must be set when connecting to the camera for the first time. To set up a password for your camera:
 - a. Check the box in the IP Finder's search results next to the camera. You can select multiple cameras.
 - b. Click "Bulk Password Assign" on the left.
 - c. Enter admin/admin for the current username and password. Enter a new username and password to the right.


Passwords must have a minimum of 8 characters with at least 4 combinations of uppercase letters, lowercase letters, numbers and special characters. Passwords cannot contain the user ID.
 - d. Click "change" to apply all changes.
- 6 Select a camera from the list by double-clicking on the camera's image or clicking on the 'Click' button under the IP Conf. column. The pop-up window will show the camera's current network settings, allowing admin users to adjust the settings as needed.
- 7 To access the camera's web page, click on the 'View Camera Website' from the IP Config window.
- 8 To save changes made to the camera's setting, enter the username and password of the camera's admin account and click 'Apply'.

The 'Bulk Password Assignment' window has two sections. The 'Current Account' section has fields for 'Username' and 'Password'. The 'New Password' section has fields for 'New', 'Confirm', and 'Hint'. A 'Change' button is at the bottom right. Below these sections is a table with columns: Name, MAC Address, IP Address, and Note. The table contains one row of data: 'DWC-MF2Wi4T', '00:0D:F1:21:66:92', '192.168.10.159', and an empty 'Note' field.

The 'DW Camera Settings' window shows configuration options for a camera. It has fields for 'Camera Name' (DWC-MF4Wi6C6) and 'MAC Address' (00:0D:F1:2B:7B:CB). Below these are radio buttons for 'DHCP' and 'Static IP'. The 'Static IP' section has fields for 'IP Address' (192.168.21.144), 'Netmask' (255.255.255.0), 'Gateway' (192.168.21.1), and 'DNS' (8.8.8.8). At the bottom, there is a 'Camera Account' section with fields for 'Username' (admin) and 'Password' (masked with dots). Below the account section are four buttons: 'Website', 'Apply', 'Reboot', and 'Cancel'.

- Select 'DHCP' for the server to assign the camera's camera settings automatically.
- Select 'Static' to manually enter the camera's network information.
- The camera's IP must be set to static if connecting to Spectrum.
- Contact your network administrator for more information.
- To access the camera from an external network, port forwarding must be set in your network's router.



Web Viewer Screen - Basic Screen (Default)

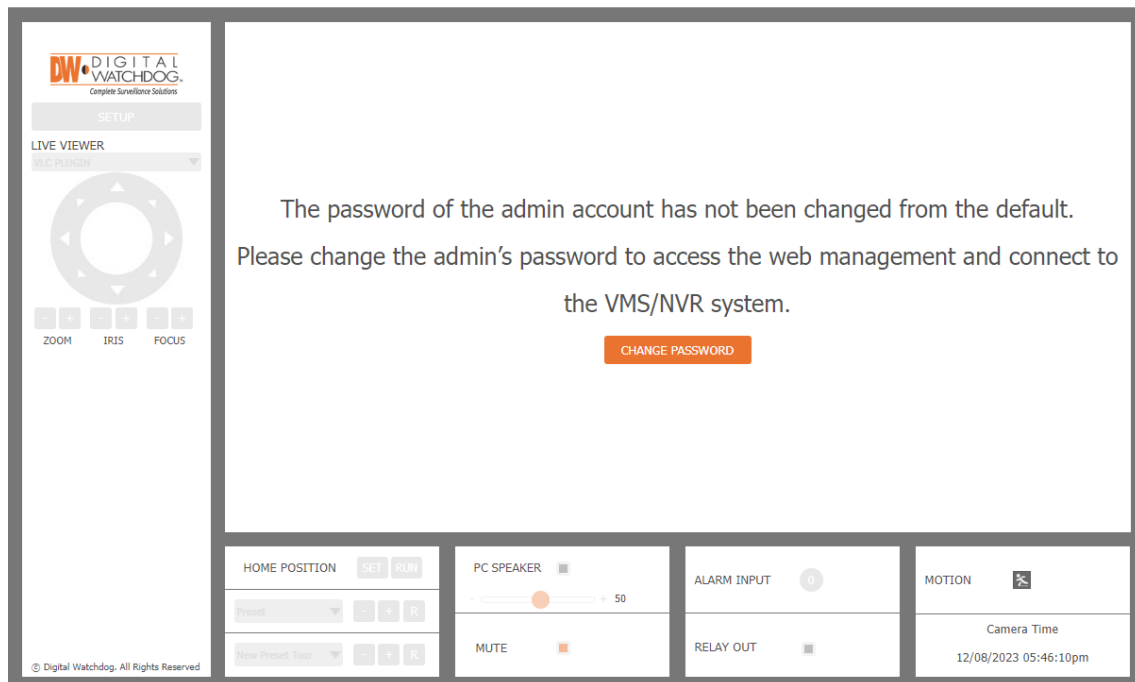

Password change is required at the initial connection or after a factory reset.

- 1 You can not see the image, and the Set up button is disabled.
- 2 Change the password using the CHANGE PASSWORD button.

- 3 After changing the password, you must log in again by pressing the RE-LOGIN button. Web index In the state of the page, when the web page does not have a mouse click or keyboard input event, the web session will close and automatically switch to the logout page. (You must log in again with the RE-LOGIN button.)

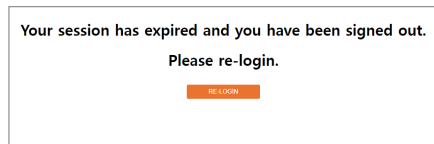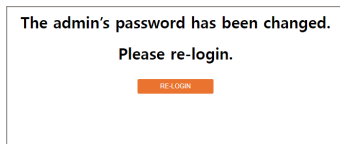

Web Viewer Screen - Basic Screen



Web Viewer is optimized for Microsoft Edge and Google Chrome.

- 1 **Live video display** - This is the region for live video streaming from the camera.
- 2 **Set up popup button** - Open the setup page to set up details of the IP camera, such as video, network, events, system, etc. See the section 'Setup.'
- 3 **Live Buffering** - Live video can be turned on and off. You can get a faster response when turning off the live video than the network band's camera setting.
- 4 **Arrow buttons** - Using the Pan and Tilt of the camera, it can move in 8 directions.
⚠ This function is only supported by PTZ cameras.
- 5 **Focus** - Adjust the camera's focus automatically based on the current view and conditions.
- 6 **Calibrate** - For cameras with a motorized zoom lens, use the calibration button to set the camera's lens settings to the current view and conditions.
- 7 **Zoom/Focus buttons** - The camera's zoom can be controlled using the six buttons, with three levels of movement. These allow users to adjust the camera's view for wide, tele, near and far movements. Clicking the buttons (<<<>>>) moves the lens more extensively than the buttons (<>).
- 8 **Auto Focus** - When enabled, the camera will adjust its focus according to the current view and conditions after each zoom adjustment.
- 9 **MFZ lock/unlock** - Lock the focus and zoom settings.
- 10 **PTZ function** - This dashboard allows users to control and activate the camera's home position or run any set presets, tours or actions on supporting cameras.
⚠ This function is supported only on PTZ cameras.

Web Viewer Screen - Basic Screen



11 Audio function - Adjust the camera's audio settings. Users can turn on or turn off audio from the camera, adjust

the volume, and turn on or turn off audio from the monitoring PC to the camera.

⚙️ This function is available on cameras with audio input and output support.

12 Alarm input - When an alarm is triggered, the (0) notification will show the alarm is active. This is available on cameras that support relay output.

13 Relay out - Turn on or turn off the relay output in the camera. This is available on cameras that support relay output.

14 Motion - When motion is detected in the camera, the motion icon will turn orange.

15 Camera Time - Shows the date and time established in the camera's settings.

⚙️ Check the Set up > System > Date & Time Setting to display the time.

Set up - Video & Audio Set up

Video Configuration

VIDEO CONFIGURATION

Stream	Codec	Resolution	Frame rate(FPS)
1	H.264	2592x1944	30
2	H.264	640x360	30
3	M-JPEG	640x360	30

Codec

Codec: H.264
 Description: channel1
 Resolution: 2592x1944
 Frame rate(FPS): 30
 GOP: 30 [1 - 120]
 Profile: High
 Bitrate mode: CBR
 Target bitrate: 5120 Kbps [100Kbps - 25600Kbps]
 Quality: 5 [1 - 10]
 Extension option: Off

APPLY

© Digital Watchdog. All Rights Reserved

1 **Detail Page** - When you select an item from the menu, you can set the details for the selected item.

2 **Set up Constitution**

Video and Audio

[VIDEO, OSD, ROI, AUDIO, PRIVACY MASK]

Camera

[IMAGE ADJUSTMENT, EXPOSURE, DAY&NIGHT, BACKLIGHT, WHITE BALANCE, IMAGE, VIDEO]

Network

[STATUS, NETWORK SETTING, AUTO IP, ONVIF, UPNP, DDNS, FTP, SMTP, SNMP, HTTP ACTION, RTSP INFORMATION]

Trigger Action

[ACTION RULES, IMAGE TRANSFER, RELAY OUT, SOUND]

Events

[EVENT RULES, MOTION, TEMPERATURE, ALARM INPUT]

Record

[MANAGEMENT, RECORD FILES, STORAGE]

MEGApix Ai

[RULES, COUNTERS, BURNT-IN ANNOTATION, TCP NOTIFICATION, HTTP NOTIFICATION, TAMPER, ADVANCED, LICENSE]

Security

[IP ADDRESS FILTER, RTSP AUTHENTICATION, IEEE 802.1x, HTTPS, CERTIFICATES, AUTO LOCK]

System

[INFORMATION, DIAGNOSTICS, CONFIGURATION BACKUP, FIRMWARE UPDATE, DATE&TIME, DST, USER MANAGEMENT, LOG, FACTORY RESET, RESTART, OPEN SOURCE, PLUG-IN]

Set up - Video & Audio Set up

Video Configuration

VIDEO CONFIGURATION

Stream	Codec	Resolution	Frame rate(FPS)
1	H.264	2592x1944	30
2	H.264	640x360	30
3	M-JPEG	640x360	30

Codec

Codec: H.264

Description: channel1

Resolution: 2592x1944

Frame rate(FPS): 30

GOP: 30 [1 - 120]

Profile: High

Bitrate mode: CBR

Target bitrate: 5120 Kbps [100Kbps - 25600Kbps]

Quality: 5 [1 - 10]

Extension option: Off

APPLY

1 Live Video Channel Set up - The video can be configured to various settings with a combination of codec and resolution. The camera performance should be considered when setting multiple channels, as the camera's performance will be affected.

2 Codec - Choose the video codec. The subcategories may be changed according to the codec selected.

3 Description - Input the additional description of the selected channel. Max. 30 alphanumeric characters may be used, including spaces.

4 Resolution - Select video resolution.

⚠ Available Frame Rate may differ even if the same codecs are in use.

4K Cameras	
1st stream	3840x2160, 2592x1944, 2560x1440, 1920x1080
2nd stream	1280x720, 800x600, 704x576, 704x480, 640x480, 640x360, 352x288, 352x240
3rd stream	1920x1080, 1280x720, 800x600, 768x432, 704x576, 704x480, 640x480, 640x360, 352x288, 352x240
5MP Cameras	
1st stream	2592x1944, 2560x1440, 1920x1080
2nd stream	1280x720, 800x600, 704x576, 704x480, 640x480, 640x360, 352x288, 352x240
3rd stream	1920x1080, 1280x720, 800x600, 768x432, 704x576, 704x480, 640x480, 640x360, 352x288, 352x240

5 Frame Rate - Select the maximum Frame Rate.

⚠ Available Frame Rate can be different, although the same codecs were set up.

Set up - Video & Audio Set up

Video Configuration

VIDEO CONFIGURATION

Stream	Codec	Resolution	Frame rate(FPS)
1	H.264	2592x1944	30
2	H.264	640x360	30
3	M-JPEG	640x360	30

Codec

Codec: H.264
Description: channel1
Resolution: 2592x1944
Frame rate(FPS): 30
GOP: 30 [1 - 120]
Profile: High
Bitrate mode: CBR
Target bitrate: 5120 Kbps [100Kbps - 25600Kbps]
Quality: 5 [1 - 10]
Extension option: Off

APPLY

- ⑥ **GOP (Group of Pictures) Size** - Set up the number of frames (P-frame) that contain only changed information based on the basic frame (I-frame). Regarding videos with lots of movement, if you set the GOP size bigger, only the number of P-frames is bigger. As a result, the video resolution will be low, but the file size and bitrate can be decreased.

⚙️ **GOP (Group of Pictures) Size -**

I-frame and P-frame creation for MPEG4, H.264, and H.265 (HEVC) video compression. 'I-frame,' also known as 'key-frame,' refers to the complete image data for a specific video frame. 'P-frame' refers to the changes in the image compared to the previous video frame. As a result, the GOP consists of one I-frame and several P-frames. For improved video quality, use a lower number of P-frames for this setting.

- ⑦ **Profile** - The profile defines the subset of bitstream features in H.264 and H.265 (HEVC) stream, including color

reproduction and additional video compression.

⚙️ H.264: Main, High / H.265 (HEVC): Main

Main - An intermediate profile with a medium compression ratio. Supports I-frames, P-frames, and B-frames.

High - A complex profile with a high compression ratio. Supports I-frames, P-frames, and B-frames.

- ⑧ **Bitrate Mode** - Select the bitrate control scheme of video compression from CBR (Constant Bitrate) or VBR (Variable Bitrate).

CBR - To guarantee the designated constant bit rate, the video quality is controlled in this mode. Therefore, the video quality will likely vary when network traffic changes.

VBR - To guarantee the designated quality, the bit rate of the video stream is changed in this mode. Therefore, the video's frame rate will likely vary when network traffic changes.

⚙️ This category will not appear if you select the MJPEG codec.

Set up - Video & Audio Set up

Video Configuration

VIDEO CONFIGURATION

Stream	Codec	Resolution	Frame rate(FPS)
1	H.264	2592x1944	30
2	H.264	640x360	30
3	M-JPEG	640x360	30

Codec

Codec: H.264
Description: channel1
Resolution: 2592x1944
Frame rate(FPS): 30
GOP: 30 [1 - 120]
Profile: High
Bitrate mode: CBR
Target bitrate: 5120 Kbps [100Kbps - 25600Kbps]
Quality: 5 [1 - 10]
Extension option: Off

APPLY

Callouts: 9 points to Target bitrate, 10 points to Quality, 11 points to Extension option, 12 points to the APPLY button.

⑨ **Target Bitrate** - If Bitrate Control is set to CBR, you can set the Target Bitrate.

⑩ **Quality** - For VBR control mode, The Target Quality of the video can be set up.

⑪ **Extension Option**

Off - You cannot use the Extension Option.

SVC-T On - The H.264, H.265 (HEVC) SVC (Scalable Video Coding) is a video compression algorithm that enables effective and efficient transmission of video files over low bandwidth networks.

⑫ Click 'Apply' to save all settings.

Set up - Video & Audio Set up

OSD Configuration

ON SCREEN DISPLAY(OSD) CONFIGURATION

1 → **Date & Time**

☐ Off ☐ On

Position X [0 ~ 100]

Position Y [0 ~ 100]

2 → **User Text**

☐ Off ☐ On

Position X [0 ~ 100]

Position Y [0 ~ 100]

Text


Enter alphabet letters, numbers, spaces, and symbols(except #, \, ", ', &, +, >, !, \$, (,), ~, {, }, [,], ^, ~, =).

3 → **APPLY**

- 1 **Date / Time** - Display the current time.
- 2 **User Text** - Output the TEXT entered by the user. Support a maximum of 30 characters.
- 3 Click 'Apply' to save all settings.

Set up - Video & Audio Set up

Region of Interest Configuration

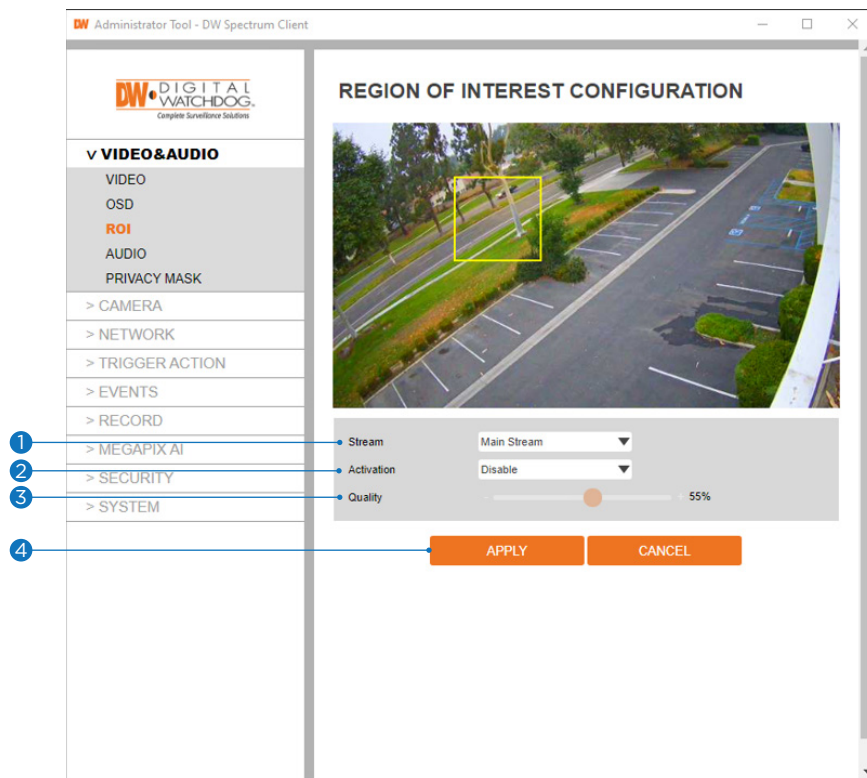

The region of interest function gives the indicated area a more efficient picture quality to improve movement in the scene without compromising the bandwidth.

- 1 **Stream** - Select the Stream.
 - ❏ Currently supports only H.264 and H.265 (HEVC).
 - ❏ The function is not supported in the MJPEG codec.
- 2 **Activation** - Turn on or turn off the region of interest function.
- 3 **Quality** - Set the quality of the set area.
- 4 Click 'Apply' to save all settings.
 - ❏ Click 'Cancel' to return to the previous setting.

Set up - Video & Audio Set up


Audio Configuration

The screenshot shows the 'AUDIO CONFIGURATION' window. It is divided into two main sections: 'Audio encode' and 'Audio out'. In the 'Audio encode' section, there are five settings: 'Audio' (a toggle switch set to 'On'), 'Source' (a dropdown menu showing 'Built-in MIC'), 'Codec' (a dropdown menu showing 'G.711 ulaw'), 'Volume' (a dropdown menu showing '0'), and 'Sample rate' (a dropdown menu showing '8,000 Hz'). In the 'Audio out' section, there are three settings: 'Audio alarm' (two radio buttons, with '1' selected), 'Volume' (a slider set to '15' with a 'Mute' checkbox), and 'Sample rate' (a dropdown menu showing '16,000 Hz'). At the bottom of the window is an orange 'APPLY' button. Numbered callouts 1 through 9 point to these specific elements: 1 points to the 'Audio' toggle, 2 to 'Source', 3 to 'Codec', 4 to 'Volume', 5 to 'Sample rate' in the encode section; 6 to 'Audio alarm', 7 to 'Volume', and 8 to 'Sample rate' in the out section; and 9 to the 'APPLY' button.

- ❶ **Audio** - Select to turn the audio input on or off from the camera.
- ❷ **Source** - Select the audio input source. The camera has a built-in microphone as well as an audio input support. The camera's built-in microphone is selected by default.
- ❸ **Codec** - Select the audio input codec.
 - ⚙ Currently, the camera supports codec G.711 ulaw.
- ❹ **Volume** - Select the audio input volume from 0 to 10.
- ❺ **Sample Rate** - Select the audio input sample rate.
 - ⚙ Currently, the camera supports 8000 Hz.
- ❻ **Audio out > Audio Alarm** - Select the audio output from the two available alarm options.
- ❼ **Audio out > Volume** - Select the audio output volume from 0 to 10.
- ❽ **Audio out > Sample Rate** - Select the audio output sample rate: 8,000 Hz or 16,000 Hz
- ❾ Click 'Apply' to save all changes.

Set up - Video & Audio Set up

Privacy Mask Configuration

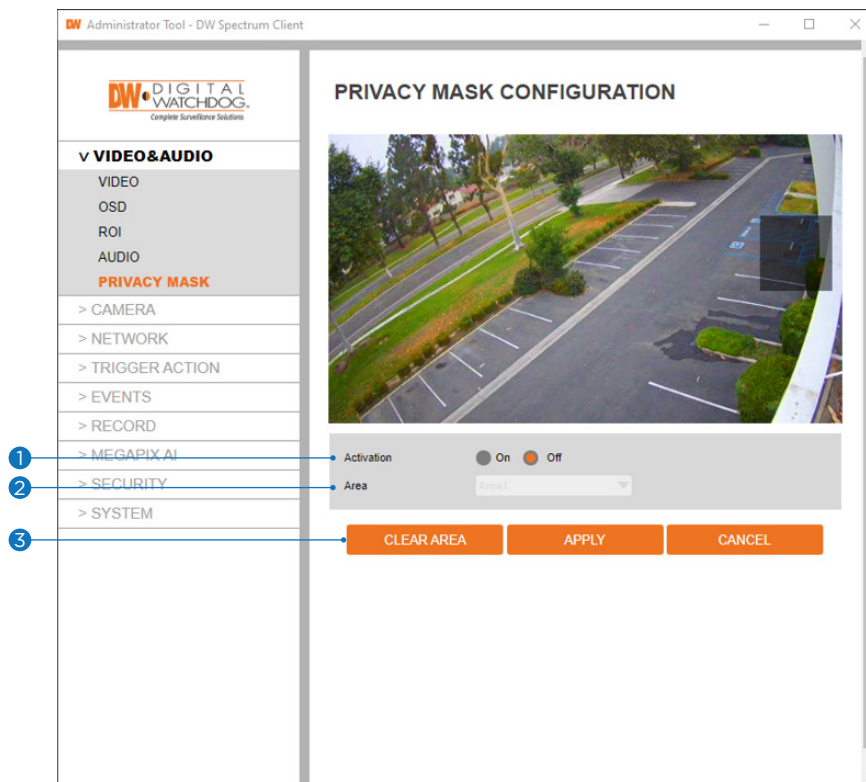


Use this function to mask areas you want to hide on-screen to protect privacy.

- 1 **Activation** - Turn on or turn off the privacy mask function.
- 2 **Area** - Select Area1 ~ Area16, then draw the privacy mask in the video display.
- 3 Click 'Apply' to save all settings.
 - Click 'Cancel' to return to the previous setting.
 - Click 'Clear Area' to delete the selected Area1~Area16.

Set up - Camera Set up


Image Adjustment

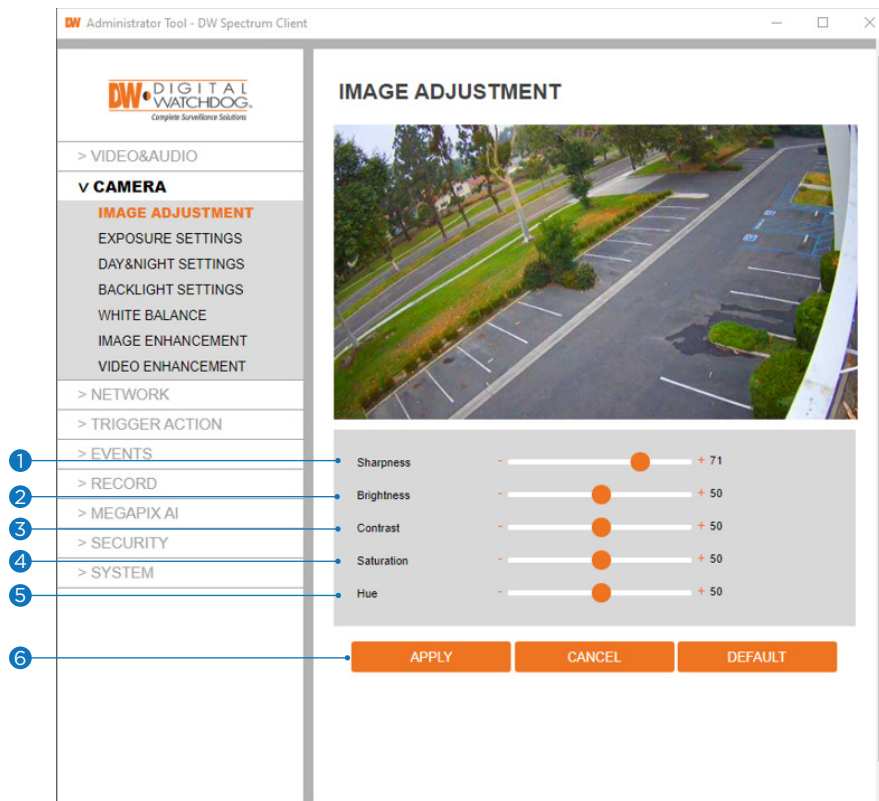

- 1 **Sharpness** - The higher the number, the sharper the lines in the image will appear.
- 2 **Brightness** - The higher the number, the brighter the image will appear.
- 3 **Contrast** - The higher the number, the stronger the contrast between colors in the image will appear.
- 4 **Saturation** - The higher the number, the more saturated the colors in the image will appear.
- 5 **Hue** - The higher the number, the stronger the hue in the image will appear.
- 6 Click 'Apply' to save all settings.
 - ⌘ Click 'Cancel' to return to the previous setting.
 - ⌘ Click 'Default' to settings to the factory defaults.

Set up - Camera Set up


Exposure Settings

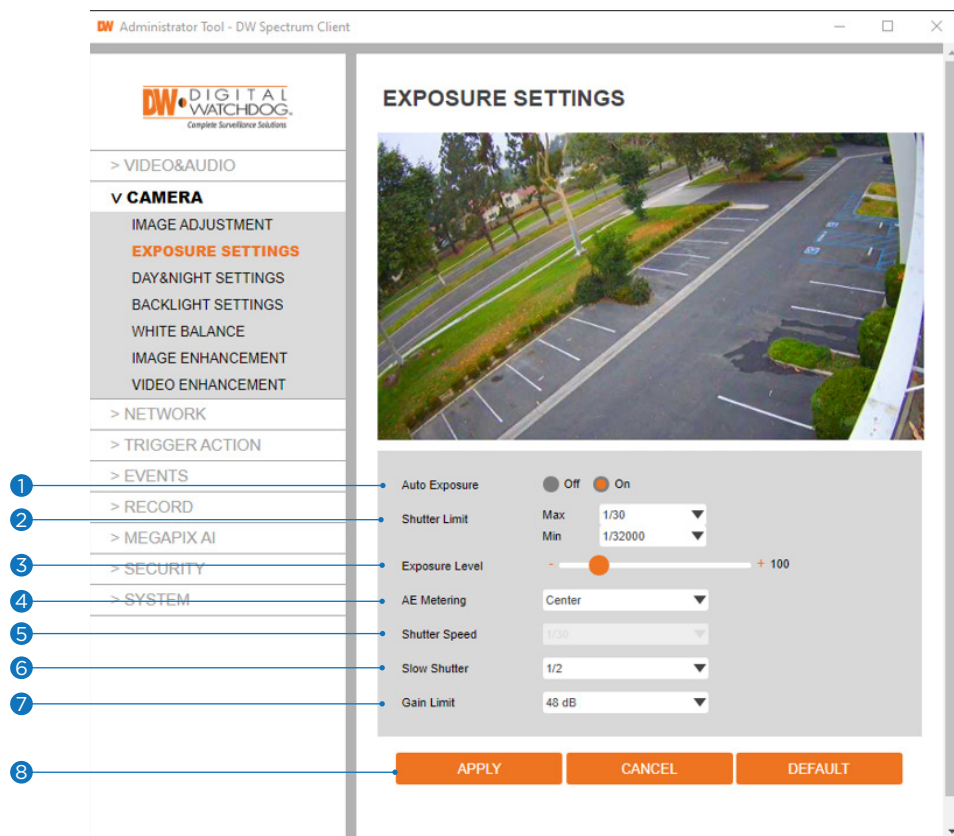

- 1 **Auto Exposure** - Automatic exposure (AE) automatically sets the aperture or shutter speed based on the external lighting conditions for the photo.
- 2 **Shutter Limit** - The higher the value, the brighter the image becomes.
- 3 **Exposure Level** - The higher the number, the brighter the image becomes.
- 4 **AE metering** - AE metering mode refers to how a camera determines the exposure.
- 5 **Shutter Speed** - If this speed is faster, the moving object can be photographed without the ghost effect. However, the picture can be dark if the lighting is insufficient.
- 6 **Slow Shutter** - Slow shutter lets you adjust the amount of light striking the sensor and determines when the video sensor sends out its batch of data for processing.
- 7 **Gain Limit** - Adjusts image gain. The lower the value, the darker the image will appear.
- 8 Click 'Apply' to save all settings.
 - Click 'Cancel' to return to the previous setting.
 - Click 'Default' to settings to the factory defaults.

Set up - Camera Set up

Day & Night Settings

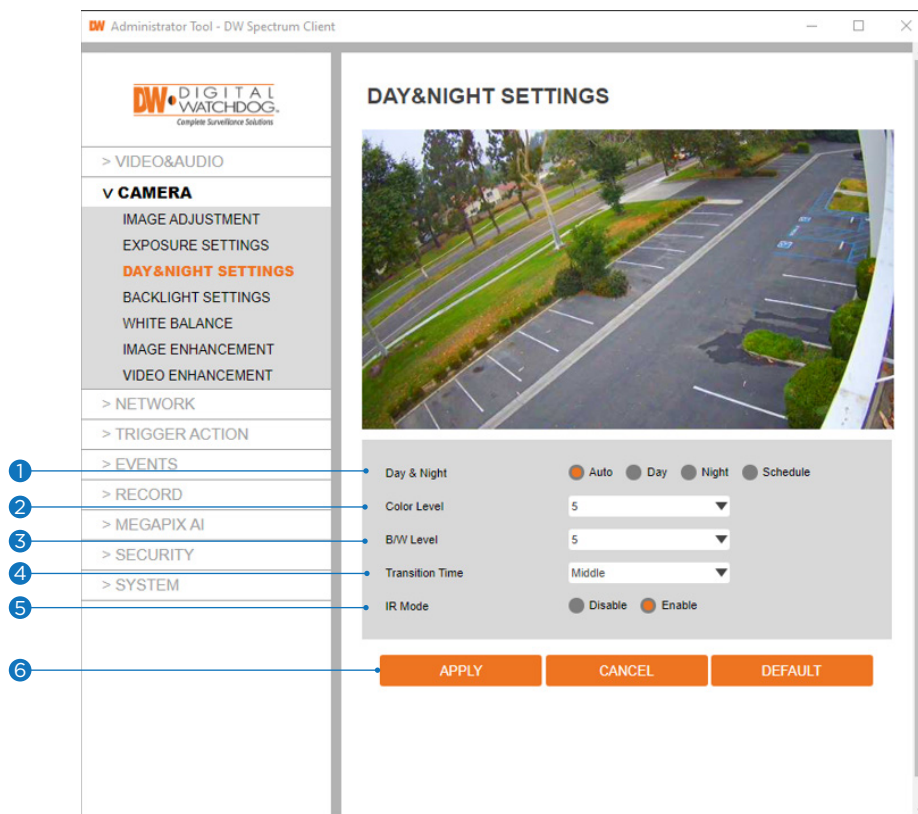

1 Day and Night


- **Auto:** In this mode, the IR cut filter is automatically removed depending on the light condition.
- **Day:** In this mode, the IR cut filter is always applied to the image sensor. The sensitivity is reduced in dark light, but better color reproduction performance is obtained.
- **Night:** In this mode, the IR cut filter on the image sensor is removed all the time. The sensitivity is enhanced in the dark light condition, but the image is black and white.
- **Schedule:** In this mode, the Day/Night mode is converted to the scheduled time.

2 **Color Level** - This level determines when the camera will change from Night mode (B/W) to Day mode (color) while set to Auto. The lower the value is, the lower the lighting threshold requirement is for the transition.

3 **B/W Level** - This level determines when the camera will change from Day mode (color) to Night mode (B/W) while set to Auto. The lower the value is, the lower the lighting threshold requirement is for the transition.

4 **Transition Time** - If the day/night switch is set to Auto, determine the rate at which Day/Night is converted.

If it is set to schedule mode, Set the time that Day/Night is converted.

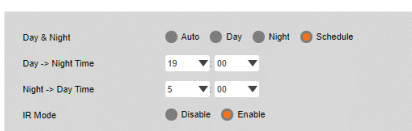


6 **IR Mode** - turn the built-in IR LEDs on or off manually.

7 Click 'Apply' to save all settings.

- ✖ Click 'Cancel' to return to the previous setting.
- ✖ Click 'Default' to settings to the factory defaults.

Set up - Camera Set up

Backlight Settings

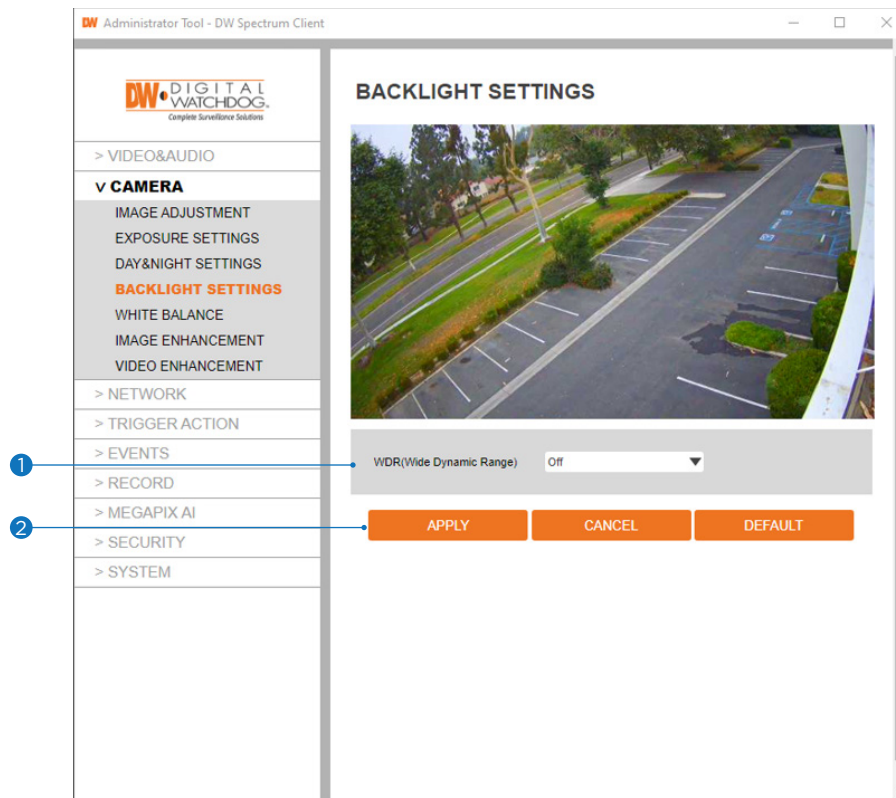


This feature is used when lighting conditions may cause detail loss in the camera's view due to high contrast.

- 1 **WDR (Wide Dynamic Range)** - Turn on or turn off the feature.
- 2 Click 'Apply' to save all changes.
 - Click 'Cancel' to return to the previous setting.
 - Click 'Default' to change the settings back to their factory defaults.

Set up - Camera Set up


White Balance

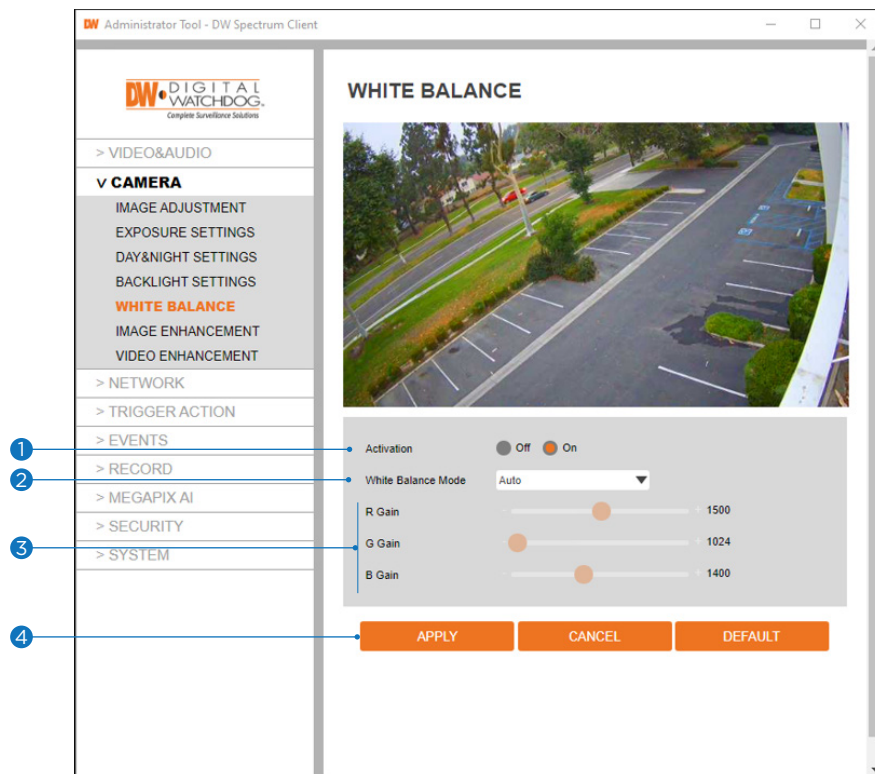

- 1 **Activation** - Turn on or turn off the White Balance function
- 2 **White Balance Mode** - Select White Balance depending on the lighting conditions.
- 3 **RGB Gain** - The R/G/B gain can be set only when the White Balance Mode is set to Manual.
- 4 Click 'Apply' to save all settings.
 - Click 'Cancel' to return to the previous setting.
 - Click 'Default' to settings to the factory defaults.

Set up - Camera Set up


Image Enhancement

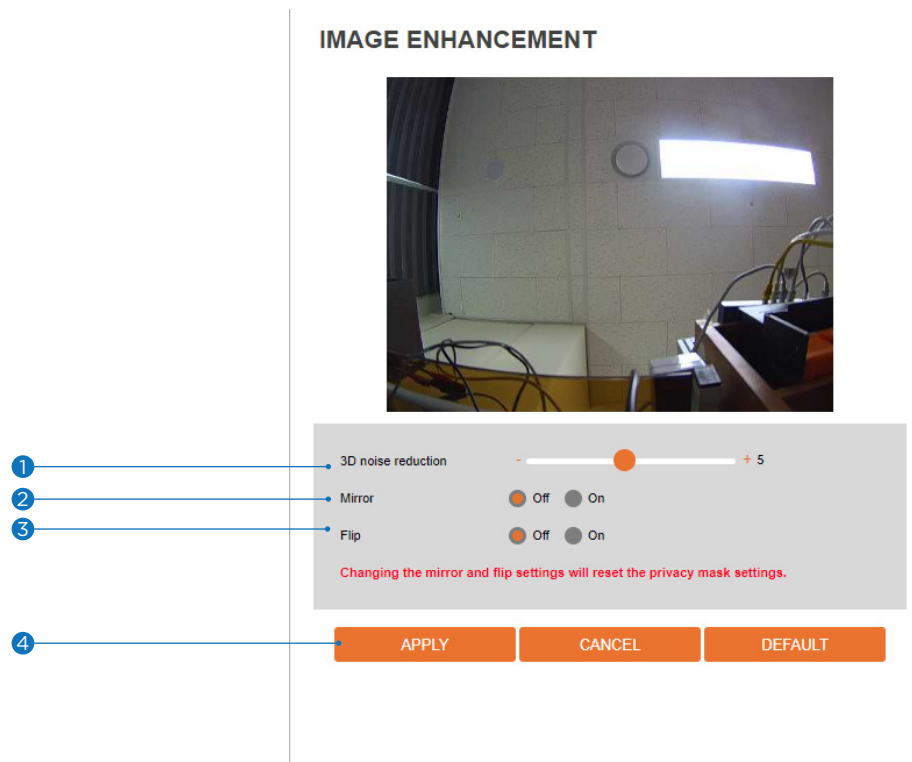

- ① **3D Noise Reduction** - Reduce digital noise in low-light conditions, improving video quality.
- ② **Mirror** - Reverse the video horizontally.
- ③ **Flip** - Reverse the video vertically.
- ④ Click 'Apply' to save all settings.
 - ⊠ Click 'Cancel' to return to the previous setting.
 - ⊠ Click 'Default' to settings to the factory defaults.

Set up - Camera Set up

Video Enhancement

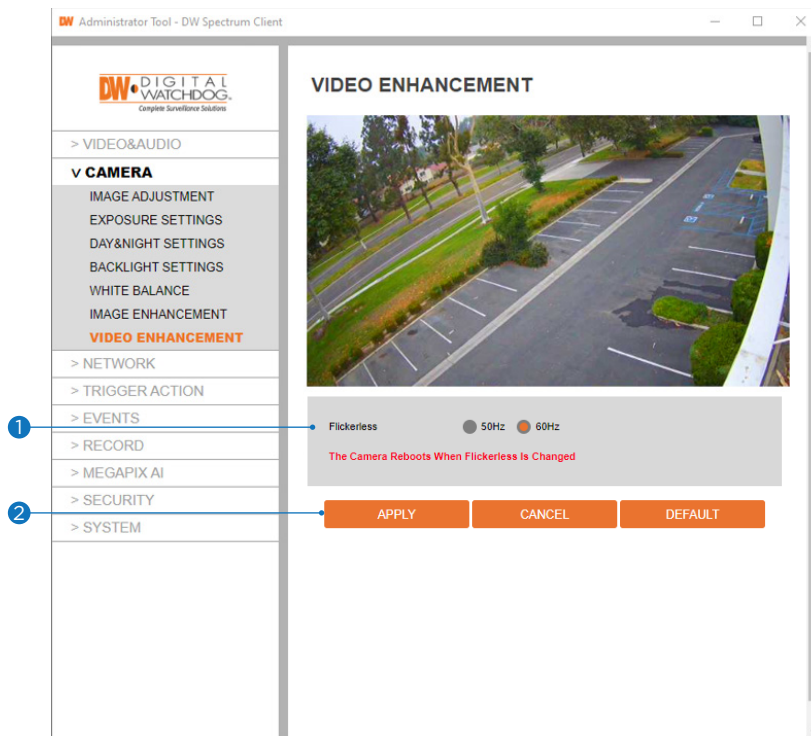

- 1 **Flickerless** - In environmental situations where the camera's image appears to flicker, change the Hz values to improve the camera's image.
- 2 Click 'Apply' to save the current settings.
 - ⌘ Click 'Cancel' to return to the previous setting.
 - ⌘ Click 'Default' to settings to the factory defaults.

Set up - Network Set up

Network Status

NETWORK STATUS

MAC Address	00:0D:F1:21:D5:A8
IP Address	192.168.3.197
Subnet Mask	255.255.0.0
Default Gateway	192.168.0.254
Preferred DNS Server	168.126.63.1
Alternate DNS Server	168.126.63.2
HTTP Port	80
HTTPS Port	443
RTSP Port	554

This menu displays the camera's current network settings. To make any changes to the settings, you must go to the appropriate network settings tab.

Set up - Network Set up

Network Settings

NETWORK SETTINGS

1 Host Name IPNC

2 Network Type
☐ Static ☒ Dynamic

IP setup

3 IP Address 192.168.3.197

4 Subnet Mask 255.255.0.0

5 Default Gateway 192.168.0.254

6 Preferred DNS Server 168.126.63.1

7 Alternate DNS Server 168.126.63.2

8 ☒ Use DNS from DHCP

Port Setup

9 HTTP Port 80 [Default: 80, 1025 ~ 60000]

10 HTTPS Port 443 [Default: 443, 1025 ~ 60000]

11 RTSP Port 554 [Default: 554, 1025 ~ 60000]

12 APPLY

- 1 **Host name** - Using the DNS' service, the camera specified by hostname can be discovered in a network.
 - 2 **Network Type** - Define the network IP address type. Select Static Mode for a fixed IP or Dynamic Mode for a dynamic IP address.
If you select Static Mode, enter the camera's IP Address, Subnet Mask, Gateway, DNS Server, and all ports.
If you select Dynamic Mode, the DHCP network requirements will automatically assign the IP address. If you click 'Apply,' the system will reboot, and you must reconnect the camera using the new IP address.
 - 3 **IP Address** - A unique string of numbers, divided into four octets (ranging from 0-255), used to identify the device over a network.
 - 4 **Subnet Mask** - Determines the range of IP address options within the network.
 - 5 **Default Gateway** - IP address of the forwarding host within the network; the router's IP address is most commonly used.
 - 6 **Preferred DNS Server** - Address of the decentralized system used to translate alphabetic names into IP addresses.
 - 7 **Alternate DNS Server** - Secondary address of the decentralized system used to translate alphabetic names into IP addresses.
 - 8 **Use DNS from DHCP** - If selected, the DHCP server will fill out the DNS information automatically.
 - 9 **HTTP Port** - The HTTP port can be set to the default 80 port or between 1025 and 60000.
 - 10 **HTTPS Port** - The HTTPS port can be set to the default 443 port or any value between 1025 and 60000.
 - 11 **RTSP Port** - The RTSP port can be set to the default 554 port or any value between 1025 and 60000.
 - 12 Click 'Apply' to save all settings.
- ※ If the network type is dynamic, the IP address is changed in the following cases. In these cases, the IP address needs to be searched again, and the camera needs to be reconnected:
- When the camera's power is switched off and on.
 - After firmware update, or when the camera is reset to its default settings and reboots.

Set up - Network Set up

Auto IP Settings

AUTO IP SETTINGS

① **General Setting**
☒ Off ☐ On

②

UNIQUE ID	d16e8953-dd84-4557-a70e-852efec07a5b
AUTO IP ADDRESS	169.254.1.0

③ **APPLY**

- ① **General Setting** - Turn on or turn off the Auto IP Settings.
- ② **Auto IP Settings Information** - Display the camera's Unique ID and Auto IP address.
- ③ Click 'Apply' to save all settings.

Set up - Network Set up

ONVIF Settings

ONVIF SETTINGS

1 **Authentication**
☐ None ☐ WS-Usertoken ☒ WS-Usertoken + Digest

2 **Discovery mode**
☒ Discoverable ☐ Nondiscoverable

3 **APPLY**

1 Authentication

None: Allow access to the camera without ONVIF authentication.

WS - Usertoken: Allow access to the camera with WS-User Token of ONVIF authentication.

WS - Usertoken + Digest: Allow access to the camera with WS-User Token and Digest of ONVIF authentication.

2 Discovery Mode - Turn on or turn off discovery mode.

3 Click 'Apply' to save all settings.

Set up - Network Set up

UPNP Settings

UPNP SETTINGS

1 • **General Setting**
☒ Off ☐ On

2 • **Device Information**
FriendlyName M1D4-SLAH5

3 • **APPLY**

- 1 **General Setting** - Turn on or turn off the UPNP function.
- 2 **Friendly Name** - Define the friendly name. Support a maximum of 30 characters and special characters.
 - Do not use: / ~ ! \$ () { } [] ; ,
 - Acceptable special characters include; @ . _ -
- 3 Click 'Apply' to save all settings.

Set up - Network Set up

DDNS Settings

DDNS SETTINGS

1 ☐ Disable

2 ☐ Public DDNS

Address

Host Name

User Name

Password

3

1 **DDNS Disable** - If it is selected, the DDNS service does not work.

2 **Public DDNS** - To use a public DDNS service, select a site address listed on the list. After filling out the site's hostname, the setup is completed by entering the username and password registered on that DDNS site.

DDNS Provider	Site Address
DynDNS	www.dyndns.com
No-IP	www.no-ip.com

⚠ If you set up DDNS properly, the IP address of your camera will be automatically updated whenever the IP address is changed or the system is rebooted.

⚠ If an IP update from the DDNS site fails, the camera will keep retrying in one (1) minute intervals.

3 Click 'Apply' to save all settings.

Set up - Network Set up

FTP Settings

FTP SETTINGS

1 General Setting
☐ Off ☒ On

2 FTP Server Address

3 FTP Upload Path /

4 FTP Port 21

5 User ID

6 Password

7 APPLY

An FTP needs to be set up to transfer/save the image to the relevant sites through FTP.

- 1 **General Setting** - Turn on or turn off the FTP function.
- 2 **FTP Server Address** - Define FTP Server IP Address. If the IP Address form is incorrect, a message box will be shown to try again.
- 3 **FTP Upload Path** - Define a path in the FTP server to store images. For the path name, English Alphabet, numbers and special characters (/ ~ !@ \$ ^ () _ - { } [] ; ,) can be used.
- 4 **FTP Port** - Define the FTP Server Port. If the port is not appropriate, accessing the FTP Server is impossible.
- 5 **User ID** - Define User ID to access the FTP Server. Fill out the correct User ID registered in the FTP Server.
- 6 **Password** - Define the password to access the FTP Server. Fill out the correct password registered in the FTP Server.
- 7 Click 'Apply' to save all settings.
☒ Refer to the above image for an example.

Set up - Network Set up

SMTP Settings

The screenshot shows the 'SMTP SETTINGS' configuration page. It is divided into three main sections: 'General Setting', 'Account information', and 'Mail Contents'. At the bottom are 'TEST' and 'APPLY' buttons. Numbered callouts point to specific elements: 1 points to the 'General Setting' toggle; 2 points to the 'Mode' radio buttons (PLAIN, SSL/TLS); 3 points to the 'SMTP Server Address' text field; 4 points to the 'PORT' text field (pre-filled with 25); 5 points to the 'User ID' text field; 6 points to the 'Password' text field; 7 points to the 'E-Mail Sender' text field; 8 points to the 'E-Mail Receiver' text field; 9 points to the 'Title' text field; 10 points to the 'Message' text area; and 11 points to the 'APPLY' button.

An SMTP needs to be set up to send/save the image to the relevant sites by e-mail.

- ① **General Setting** - Turn on or turn off the SMTP function.
- ② **Mode** - Select the security mode of SMTP from Plain or SSL/TLS. After checking the account setup of your SMTP Server, you may select one.
- ③ **SMTP Server Address** - Define the SMTP Server Address. If the IP Address form is incorrect, a message box will be shown to try again.
- ④ **Port** - Define the Port used in the Plain or SSL/TLS security mode above.
- ⑤ **User ID** - Define the User ID to access the SMTP Server. Fill out the correct User ID registered in the SMTP Server.
- ⑥ **Password** - Define the Password to access the SMTP Server. Fill out the correct password registered with the SMTP Server.
- ⑦ **E-Mail Sender** - Define the e-mail address of the e-mail Sender. It will be displayed as the sender when the camera sends an e-mail.
- ⑧ **E-Mail Receiver** - Define the e-mail address of the e-mail Receiver. It will be displayed as the Receiver when the camera sends an e-mail.
- ⑨ **Title** - Define the title of the e-mail when the camera sends an e-mail.
 - ※ The title of the e-mail is limited to 40 characters, including the spaces.
- ⑩ **Message** - Define the contents of the e-mail when the camera sends an e-mail. The message of the e-mail is limited to 40 characters, including the spaces.
- ⑪ Click 'TEST' to send a test message 'Apply' to save all settings.

Set up - Network Set up

SNMP Settings

SNMP SETTINGS

SNMP v1/v2c

1 ☐ Off ☐ On

2 ☐ Off ☐ On

Read Community

Write Community

3 ☐ Off ☐ On

TrapAddress

TrapCommunity

SNMP v3

4 Mode

5 ☐ Off ☐ On

6 Read Name

7 Security Level

8 Authentication Algorithm

9 Authentication Password

10 Private-Key Algorithm

11 Private-Key Password

11

1 **SNMPv1/SNMPv2** - Select the SNMPv1/SNMPv2 option and type the names of Read and Write communities.

SNMP trap can be used to check for operational thresholds or failures periodically defined in the MIB.

2 **SNMP Trap** - Turn on or turn off the SNMP trap.

SNMPv3 contains a higher cryptographic security level, allowing you to set the Authentication and Encryption passwords.

3 **Mode** - Select either Read or Read/Write mode.

4 **Activation** - Select the mode to turn on or turn off.

5 **Read/Write name** - Define Read name and Write name.

6 **Security Level** - Select no auth, no priv/auth, or priv.

7 **Authentication Algorithm** - Select MD5 or SHA as the authentication method.

8 **Authentication Password** - The authentication password is an encryption method for authentication and is between 8 and 30 digits long.

9 **Private-Key Algorithm** - Select DES or AES as the encryption algorithm.

10 **Private-Key Password** - An information protection password is private encryption and is between 8 to 30 digits long.

11 Click 'Apply' to save all settings.

Set up - Network Set up

HTTP Action

The screenshot shows the 'HTTP ACTION' configuration window. It is divided into three main sections: 'General Setting', 'Account information', and 'Message'. The 'General Setting' section has a toggle switch for 'Off' and 'On'. The 'Account information' section contains five input fields: 'Description', 'HTTP Action Server', 'PORT' (with '80' pre-filled), 'User ID', and 'Password'. The 'Message' section has a large text area for the 'Message'. At the bottom right is an orange 'APPLY' button. Four numbered blue circles with arrows point to these elements: 1 points to the 'General Setting' header, 2 points to the 'Account information' header, 3 points to the 'Message' header, and 4 points to the 'APPLY' button.

- ❶ **General Setting** - Turn on or turn off the camera to send an HTTP action when an event occurs. When enabled, the camera can notify a monitoring software using HTTP protocol.
- ❷ **Account information** -
Description: Enter a short description of the action.
HTTP Action Server: Enter the HTTP address of the receiving server. This is the server that will receive the HTTP action notification from the camera.
PORT: Enter the port number for the receiving server.
User ID: Enter the user ID information for the receiving server.
Password: Enter the password information for the receiving server.
- ❸ **Message** - Enter the default message that will be included with the alert.
- ❹ Click 'Apply' to make the above setting effective.

Setup - Network Setup

RTSP Information

RTSP INFORMATION

RTSP Global Setting

1 → Target Stream: Main Stream

Session

2 → Time Out: 0 [Default: Off, 30~120]

3 → RTSP Options: ☒ audio ☒ meta

QoS Setting

4 → DSCP: 0 [0~255]

Rtp Multicast

5 → MULTICAST: ☒ Stop ☐ Start

IP: 0.0.0.0

PORT: 0 [1024~60000]

TTL: 0 [1~255]

6 → APPLY

7 →


No	Remote IP	Port	Type
1	127.0.0.1	39428	TCP

- 1 **Target Stream** - Select the stream you want to set.
- 2 **Time out** - Set, in seconds, the time limit for the RTSP stream to disconnect. The RTSP time-out is disabled by default.
- 3 **RTSP Options** - Check the box to include audio and/or metadata with the RTSP stream.
- 4 **QoS Setting** - Set the quality of service to ensure data transfer performance. Select from 0~255. The function is disabled by default.
- 5 **RTP Multicast** - Check RTP Multicast Start/Stop. RTP multicast is disabled by default.
To activate RTP Multicast:
 1. Click on the "Start" button to turn on.
 2. Enter an IP address, port for video stream control, and packet TTL information for the RTP Multicast.
 3. Click 'Apply' to save all settings.

⚙️ Users can set separate RTP multicasts for each stream.
- 6 Click 'Apply' to save all settings.
⚙️ Click this button after completing the setup for each channel.
- 7 The table shows all active RTP settings.

Set up - Trigger Action Set up

Action Rules Configuration

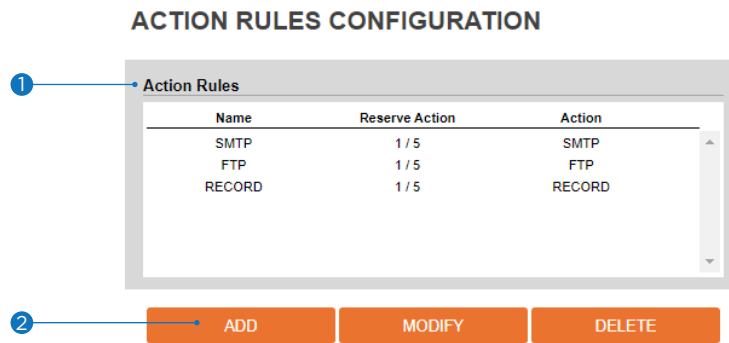

- 1 **Action rules List** - This indicates the custom action rule information added to the action rules list.
- 2 Click 'Add' to add custom action rules.
 - Click 'Modify' to modify selected items from the action rules list.
 - Click 'Delete' to delete selected items from the action rules list.

Set up - Trigger Action Set up

Action Rules Configuration

ACTION RULES CONFIGURATION

General Setting

1 Name

2

Action1	<input type="text" value="NONE"/>
Action2	<input type="text" value="NONE"/>
Action3	<input type="text" value="NONE"/>
Action4	<input type="text" value="NONE"/>
Action5	<input type="text" value="NONE"/>

3

- 1 **Name** - Define the name of the action rules.
 - ⚠ Input text cannot exceed the limit (3-15 characters).
- 2 **Action1 ~ Action5** - Select the action to take If the event occurs.
- 3 Click 'Apply' to save all settings.
 - ⚠ Click 'Cancel' to return to the previous menu.

Set up - Trigger Action Set up

Image Transfer Configuration

IMAGE TRANSFER CONFIGURATION

1. Add the FTP/SMTP action in the event rules menu.
2. When an event occurs, the images will be sent to ftp/smtp address .
3. Determine the image transfer speed and the duration of image transfer after/before an event.

Pre/Post Alarm Image

Number Of Image	2	Image Per Seconds(s) [1 ~ 5]
Pre-Alarm Duration	3	Second(s) [1 ~ 5]
Post-Alarm Duration	3	Second(s) [1 ~ 30]
Max. Number Of Image	30	<input type="checkbox"/> [Default: Off, 5 ~ 1000] (SMTP Only)

APPLY

- 1 **Pre/Post Alarm Image** - Image Transfer due to an event is configured by setting the image transfer rate and Pre/Post alarm duration.
 - **Number of images:** Define the number of images transferred per second.
 - **Pre-alarm duration:** Define the duration of the image transfer before an event.
 - **Post-alarm duration:** Define the duration of the image transfer after an event.
 - **Max. number of images:** Set a limit to the number of images transferred after an event. This is turned off by default.
- 2 Click 'Apply' to save all settings.

Set up - Trigger Action Set up

Relayout Configuration

The screenshot shows a web interface titled "RELAYOUT CONFIGURATION". It contains several configuration fields and an "APPLY" button. Five numbered callouts point to specific elements: 1 points to the "Relay output" dropdown menu showing "01"; 2 points to the "Mode" section with radio buttons for "Monostable" and "Bistable"; 3 points to the "Idle state" section with radio buttons for "Closed" and "Open"; 4 points to the "Duration" input field showing "1" and the unit "Seconds [1 - 30]"; 5 points to the orange "APPLY" button. Below the configuration fields, there is a section titled "API examples for relay output testing" with two numbered items: "1. Activate relay output trigger" with a URL <http://192.168.3.4/cgi-bin/admin/io.cgi?msubmenu=relay&action=apply&idlestate=1>, and "2. Deactivate relay output trigger" with a URL <http://192.168.3.4/cgi-bin/admin/io.cgi?msubmenu=relay&action=apply&idlestate=0>.

- ❶ **Relay Output** - Select the Relay output.
 - ⚙ The number of relay outputs available depends on the camera model.
- ❷ **Mode** - Select the monostable/bistable for relay mode.
- ❸ **Idle State** - Select whether the contact is normally opened or closed.
- ❹ **Duration** - Relay out is operated during the setting time.
 - ⚙ In monostable mode, this function must be set up.
- ❺ Click 'Apply' to save all changes.

Set up - Trigger Action Set up Sound Configuration

The screenshot shows a 'SOUND' configuration panel. At the top, it lists supported .wav file formats: File size (5MB or less), Audio codec (pcm_s16le), Sample rate (16000Hz), Channels (stereo), and Audio bit-rate (256kbps). Below this is a 'Sound file upload' section with a 'Sound file' label and a 'Select file' button. A 'START SOUND FILE UPLOAD' button is positioned to the right. The 'Sound play' section features two radio buttons: 'Default' (selected) and 'User', each with a right-pointing arrow. At the bottom right is an 'APPLY' button. Four numbered blue circles with arrows point to: 1. 'Sound file' label, 2. 'START SOUND FILE UPLOAD' button, 3. 'Default' radio button, and 4. 'APPLY' button.

- ❶ **Sound File** - Select a sound file to add to the camera. The camera supports built-in sound files and user-uploaded files. Click on 'Select File' and choose the sound file you want to upload. The file must be .WAV and encoded with the following information:
 - ⚙ File size: 5MB or less
 - ⚙ Audio codec: pcm_s16le
 - ⚙ Audio bitrate: 256kbps
 - ⚙ Channels: Stereo
 - ⚙ Sample Rate: 8000Hz
- ❷ **Start Sound File Upload** - Once the file has been selected, press the upload button to upload the file to the camera.
- ❸ **Play Sound** - Select whether the camera will play the default sound or user-uploaded sound when the alarm is activated.
- ❹ Click 'Apply' to save all changes.

Set up - Event Set up

Event Rules Configuration

EVENT RULES CONFIGURATION

1 Event rules

Name	Reserve event	Schedule	Action
------	---------------	----------	--------

2 ADD MODIFY DELETE

API examples for siren and LED testing

1. SOUND
<http://192.168.3.4/cgi-bin/admin/system.cgi?msubmenu=flashlightled4&action=apply&timeout=7>
2. Red LED
<http://192.168.3.4/cgi-bin/admin/system.cgi?msubmenu=flashlightled4&action=apply&led=frontred>
3. Green LED
<http://192.168.3.4/cgi-bin/admin/system.cgi?msubmenu=flashlightled4&action=apply&led=frontgreen>
4. Blue LED
<http://192.168.3.4/cgi-bin/admin/system.cgi?msubmenu=flashlightled4&action=apply&led=frontblue>
5. White LED
<http://192.168.3.4/cgi-bin/admin/system.cgi?msubmenu=flashlightled4&action=apply&led=frontwhite>
6. Red/Blue LED
http://192.168.3.4/cgi-bin/admin/system.cgi?msubmenu=flashlightled4&action=apply&led=red_blue&timeout=3600
7. LED off
<http://192.168.3.4/cgi-bin/admin/system.cgi?msubmenu=flashlightled4&action=apply&led=off>

- 1 **Event Rules List** - Indicates the custom Event Rule information added to the Event Rules list.
- 2 Click 'Add' to add custom event rules.
- Click 'Modify' to modify selected items from the event rules list.
 - Click 'Delete' to delete selected items from the event rules list.

Set up - Event Set up

Event Rules Configuration

EVENT RULES CONFIGURATION

General

1 → Name

Event Condition

2 → Event ▼

If "System Initialize" is selected, "Recoding" does not work.

Action


3 → Rules ▼

4 →

- 1 **Name** - Define the Event rule name.
- 2 **Event** - Select the event among motion detection, network disconnection, illegal login detected, temperature critical, video analytics, system initialized and sensor detection.
 - ⊠ Click 'Cancel' to return to the previous setting.
 - ⊠ You need at least one event.
- 3 **Rules** - Select the action rule defined in the Trigger Action-Action rule menu.
- 4 Click 'Apply' to save the current settings.
 - ⊠ Click 'Cancel' to return to the previous setting.

Set up - Event Set up

Motion Detection Configuration

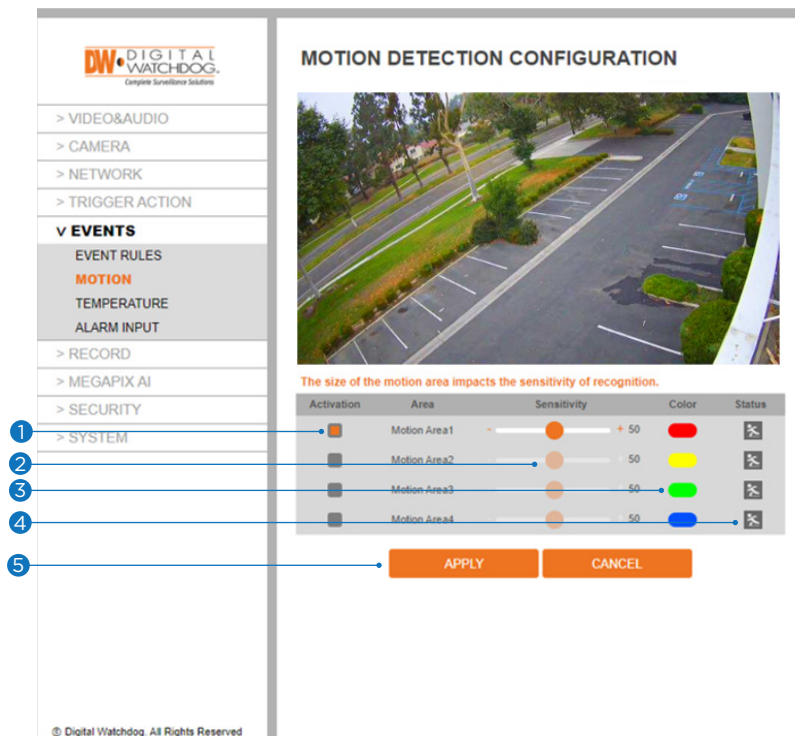

- 1 **Activation Areas** - The camera supports up to four (4) separate motion detection zones. At least one zone must be activated to detect motion in the camera's view. Check the box next to the zone you want to activate. Click the preview screen and click and drag the edges of the detection zone to adjust the size and position of the camera's view.
- 2 **Sensitivity** - Define the sensitivity of motion detection. If a high value is selected, it will detect very small motion, while it becomes relatively insensitive when a low value is selected.
- 3 **Color** - Identify the detection zone on the preview according to the color of the zone.
- 4 **Status** - Event Alert Icon() appears if 'Motion Detection' is activated and motion is being detected.
- 5 Click 'Apply' to save all settings.
 - ⌘ Click 'Cancel' to return to the previous setting.

Set up - Event Set up

Temperature

TEMPERATURE

General Setting

1	Mode	Fahrenheit
2	Threshold	150 [122 ~ 212]
3	TEMPERATURE	122 °F

4 **APPLY**

- 1 **Mode** - Select Fahrenheit or Celsius.
- 2 **Threshold** - Define the temperature at which the event trigger occurs.
- 3 **Temperature** - It indicates the current temperature of the IP camera.
- 4 Click 'Apply' to save all settings.

Set up - Event Set up


Tamper

The screenshot shows a configuration window titled "TAMPER". Inside, there is a section titled "Tamper Detection". This section contains three settings: "Enable" with radio buttons for "On" (selected) and "Off"; "Duration" with a text input field containing "20" and a label "Seconds [1 ~ 60]"; and "Area Threshold" with a text input field containing "40" and a label "% [0 - 100]". Below these settings is an orange button labeled "APPLY". Four numbered blue circles with arrows point to these elements: 1 points to "Enable", 2 points to "Duration", 3 points to "Area Threshold", and 4 points to the "APPLY" button.

- ① **Enable** - Select to turn on or off tampering detection.
- ② **Duration** - Define the amount of time (1-60 seconds) tampering needs to occur to trigger an event.
- ③ **Area Threshold** - Define the percentage of the detection zone that needs to detect tempering to trigger an event.
- ④ Click 'Apply' to save all settings.

Set up - Event Set up

Alarm Configuration

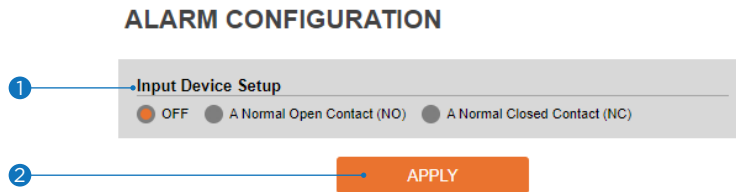

- ① **Input Device Set up** - Select the input device type from OFF, N.O. and N.C.

	Operation
OFF	Ignore this input sensor.
NO	The contact is normally open and closed when activated.
NC	The contact is normally closed and open when activated.

- ② Click 'Apply' to save all changes.

Set up - Record Set up

Record Management

RECORD MANAGEMENT

1 **Record Global Setting**

Target Stream

2 **APPLY**

3 **RECORDED FILES**

Name	Enabled	File Type	Storage	Continuous
RECORD0	X	MP4	STORAGE1	Off
RECORD1	X	MP4	STORAGE1	Off

4 **MODIFY**

1 **Target Stream** - Select the channel you want to record the video.

2 Click 'Apply' to save the current settings.

3 **Recording List** - Display the information about the recording settings.

4 Click 'Modify' to modify the selected item in the recording list.

Record 0: Select for continuous recording.

Record 1: Select for event recording.

Set up - Record Set up

Record Management

RECORD MANAGEMENT

Record Settings


- ① Enabled ☐ Off ☒ On
- ② Storage Device
- ③ File Type
- ④ Storage
- ⑤ Continuous ☐ Off ☒ On
- ⑥ Pre Duration [0 ~ 5]
- ⑦ Post Duration [1 ~ 240]

⑧


- ① **Enabled** - Turn on or turn off this function.
- ② **Storage Device** - This option shows the SD card currently mounted on the camera.
- ③ **File Type** - Select the recording file type.
 - ⚙ Currently, the camera supports MP4 file type.
- ④ **Storage** - Select the storage type. SD Card (Disabled) selection is not allowed.
- ⑤ **Continuous** - The camera will start recording automatically if continuous mode is turned on.
- ⑥ **Pre-Duration** - Define the duration of recording before an event.
- ⑦ **Post-Duration** - Define the duration of image transfer after an event.
- ⑧ Click 'Apply' to save the current settings.
 - ⚙ Click 'Cancel' to return to the previous setting.

Set up - Record Set up

Recorded Files

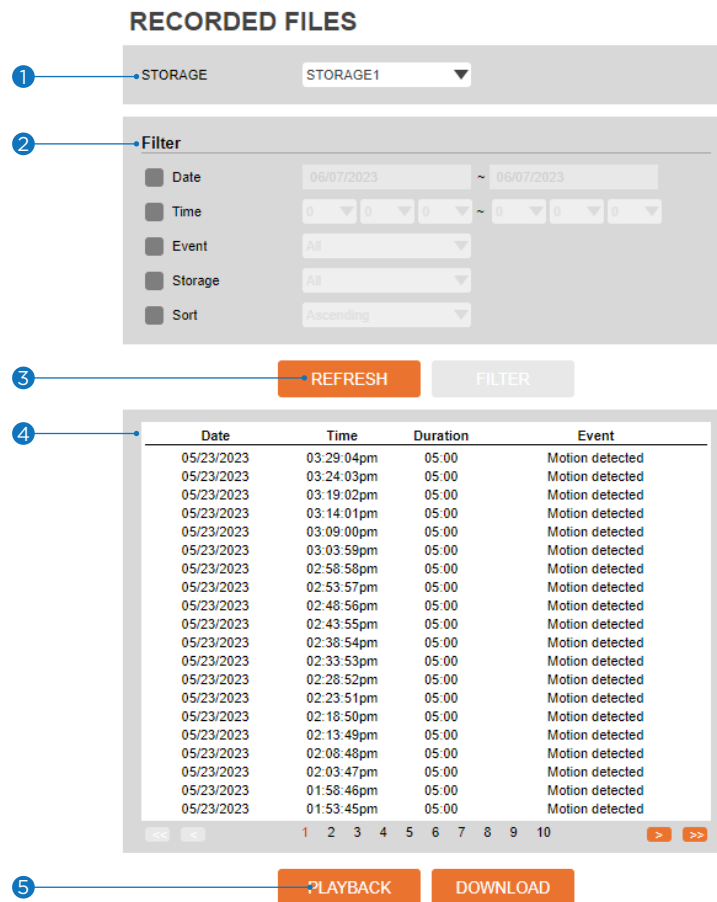


- 1 **Storage** - Select Storage from the available options.
- 2 **Filter** - Select the date/time, event, sort, or storage format to filter the recorded video results.
- 3 Click the 'Refresh' button to refresh the search results as needed.
 - ⌘ Click 'Filter' to view the filtered recorded video.
- 4 **Recording List** - Display the information of the recorded video.
- 5 Click 'Playback' to view the selected item in the list of recorded video results.
 - ⌘ Click 'Download' to download the selected item.
 - When you click 'Download,' the following window appears.
 - When downloading, please fill in the purpose of the file download. The field is limited to 30 characters. (This information will be shown on the Log page with the download time).

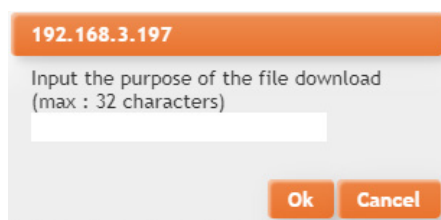

- ⌘ When playing back recorded MP4 files with H.265 (HEVC) codec, the video may not play due to a performance issue with the VLC plug-in.

Set up - Record Set up

Recorded Files

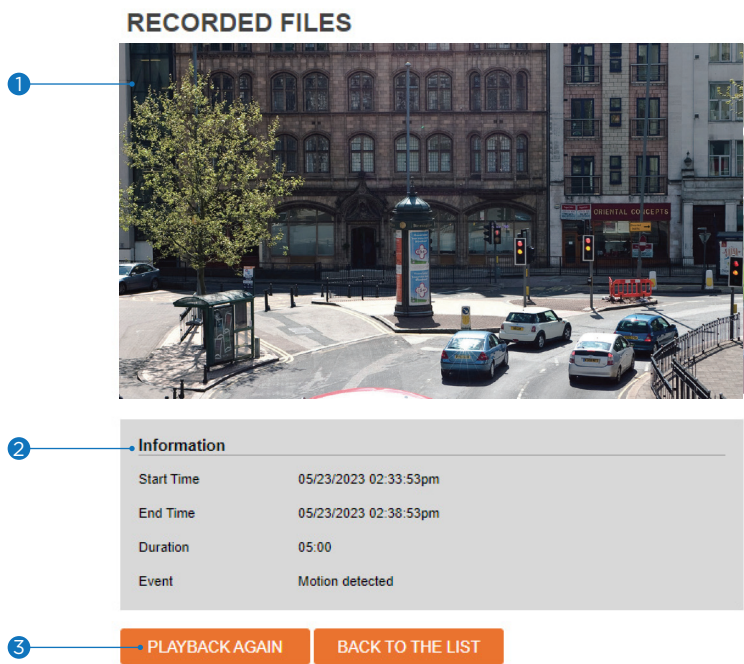

- 1 **Recording Video Viewer** - Play the recorded video.
- 2 **Recording Video Information** - Display information about the recorded video.
- 3 Click 'Playback' to view the recorded video again.
 - Click 'Back' to return to the previous menu.

Set up - Record Set up

Storage Configuration

STORAGE CONFIGURATION

Notice

1. If SD Card does not automatically mount, you must format for mounting SD card.


Storage List				
Name	Mounted	Size	Used(%)	Available
SDCard1	No	0	0%	0

Display the SD card information mounted on the device.

- ☒ Select an item from the Storage List to configure its related functions.

Set up - Record Set up

Storage Configuration

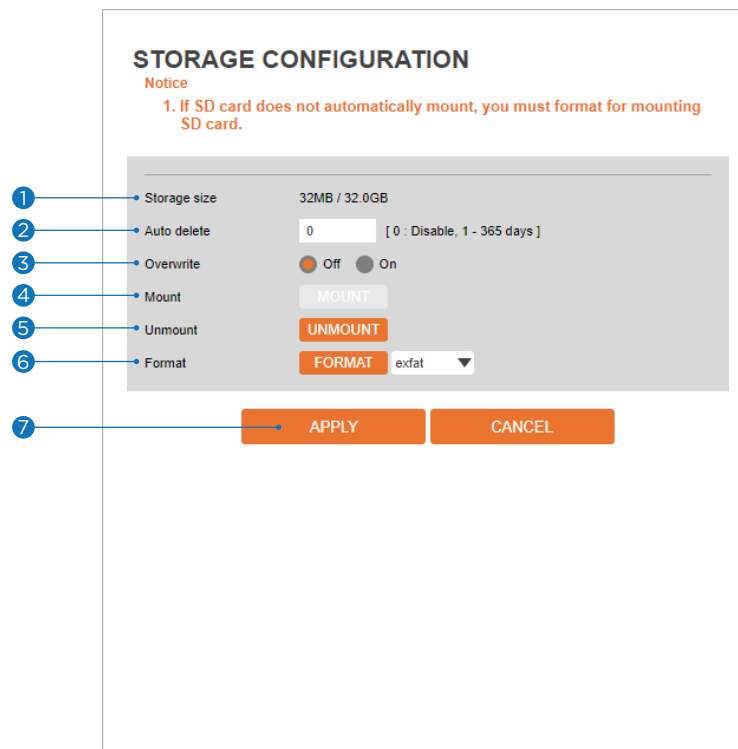

- ❶ **Storage Size** - Total capacity of the SD card and the remainder of it are displayed.
- ❷ **Auto Delete** - Select the period for auto delete. The data stored before the set period will be deleted automatically.
 - ⚙ Delete all stored images older than the selected time.
- ❸ **Overwrite** - Once enabled, new data will overwrite the oldest data once the SD card has less than 8MB of storage. If OFF is selected, once the SD card has less than 8MB available, the camera will stop recording to the SD card.
- ❹ **Mount** - If the loaded SD memory card is unmounted or is not automatically mounted, mount the SD memory card to the camera.
- ❺ **Unmount** - remove the SD card from the device.
- ❻ **Format** - Formatting the SD card will permanently delete all recorded video and audio files stored on the card. Ensure you have backed up any important data before proceeding, as this action cannot be undone.

File System Options:

- ⚙ exFAT: Recommended for better file stability and compatibility with large files.
- ⚙ vFAT: Another option available, but it may offer lower file stability compared to exFAT.
- ⚙ Note: Using exFAT is recommended to maintain file reliability and integrity.

- ❷ Click 'Apply' to save the current settings.
 - ⚙ Click 'Cancel' to return to the previous setting.

Set up - Security Set up

IP Address Filter Configuration

IP ADDRESS FILTER CONFIGURATION

1

2

3

4

5

6

General Setting

IP Address Filter

On

Off

IP Filter Type

Allow

APPLY

Filtered IP Address

IP Address

IP Address

[Invalid]


ADD

REMOVE

- 1 **IP Address Filter** - Turn on or turn off this function.
- 2 **IP Filter Type** - Select the recording IP filter type.
- 3 Click 'Apply' to save all settings.
- 4 **Filter IP Address** - Display the filtered IP address.
- 5 **IP Address** - Define the IP address you want to apply to the IP filter.
- 6 Click 'Add' to add the IP address to the list.
 - Click 'Remove' to remove the IP address selected in the list.

Set up - Security Set up

RTSP Authentication Configuration

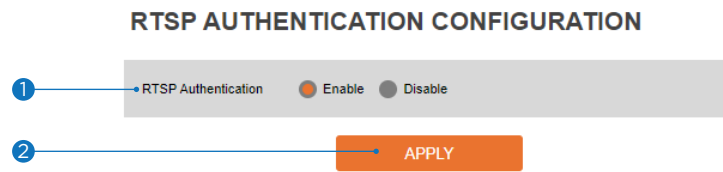

- 1 **RTSP Authentication** - Turn on or turn off the RTSP authentication.
- 2 Click 'Apply' to save all settings.

Set up - Security Set up

IEEE 802.1X Configuration

IEEE 802.1X CONFIGURATION

1

2

3

4

5

6

7

8

9

General Setting

IEEE 802.1x ☒ On ☐ Off

Protocol MD5 ▼

EAPOL Version 1 ▼

ID

Password

Retype Password

CA Certificate NONE ▼

Certificate NONE ▼

APPLY

The feature is needed when connecting the camera to the network protected by IEEE 802.1X.

- 1 **IEEE 802.1x** - Turn on or turn off the IEEE 802.1x feature.
- 2 **Protocol**
 - MD5: It provides one-way password-based network authentication of the client.
 - PEAP: It is similar to TTLS in that it does not require a certificate on the client side.
 - TTLS/MD5: It does not require a certificate on the client side.
 - TLS: It relies on client-side and server-side certificates to perform authentication.
- 3 **EAPOL Version** - Select the EAPOL Version.
- 4 **ID** - Type the ID to identify the client in the IEEE 802.1X authentication server.
- 5 **Password** - Type the Password to identify the client in the IEEE 802.1X authentication server.
- 6 **Verify** - Verify Password.
- 7 **CA Certificate** - Select the CA certificate required for TLS, TTLS, and PEAP authentication.
- 8 **Certificate** - Select the client certificate required for TLS authentication
- 9 Click 'Apply' to save all settings.

Set up - Security Set up

HTTPS Configuration

HTTPS CONFIGURATION

1. If no certificates are available go to certificates to manage.

1

Certificates
Certificate NONE ▼

2

HTTPS connection Policy
WEB HTTP and HTTPS ▼
ONVIF HTTP ▼
RTSP OVER HTTP HTTP ▼

3


→ **APPLY**

HTTPS encrypts session data over SSL or TLS protocols instead of using plain text in socket communications.

- 1 **Certificate** - Select an installed certificate.
 - ⚙ If you cannot select a certificate, please install the certificate from the Security->Certificates menu.
- 2 **HTTPS connection Policy** - Select HTTP, HTTPS, or HTTP and HTTPS depending on the connected web, ONVIF, RTSP over HTTP.
 - WEB: HTTP, HTTPS, or HTTP and HTTPS.
 - ONVIF, RTSP OVER HTTP: HTTP or HTTPS.
- 3 Click 'Apply' to save all settings.
 - ⚙ When HTTPS mode is chosen, input https://<IP Address> to connect to the camera.

Set up - Security Set up

Certificates Configuration

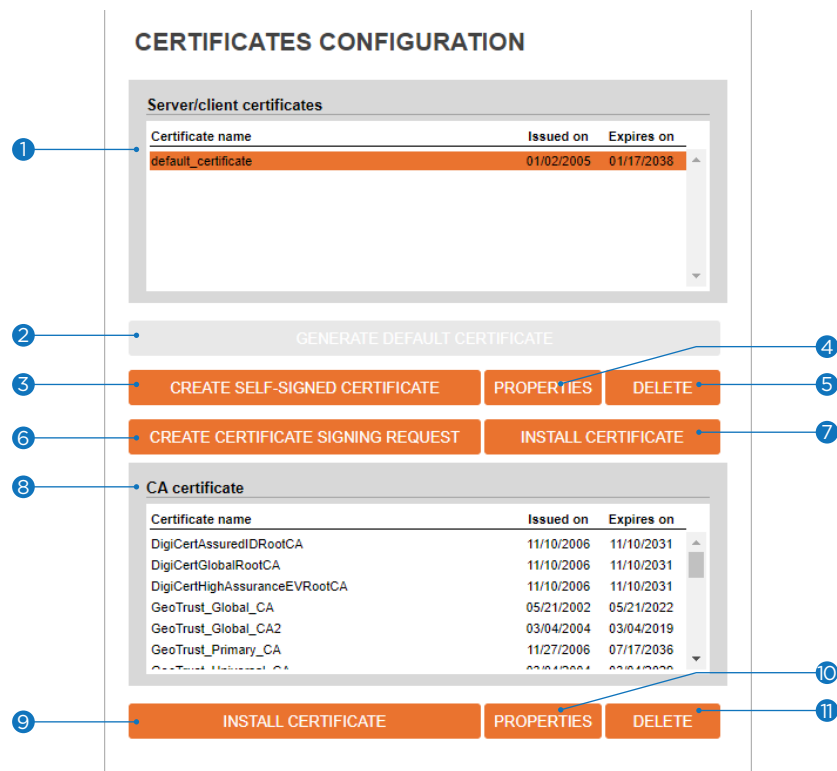

- ❶ **Server/Client Certificates** - Shows the installed certificates.
- ❷ **Generate Default Certificate** - When selected, the system automatically generates a default HTTP certificate without requiring any additional input or configuration from the user. It is disabled when there is at least one certificate existing. The option will be enabled when there are no existing certificates in the Server/client certificates section.
- ❸ **Create Self-Signed Certificate** - A self-signed SSL certificate is an identity certificate signed by its creator. But they are considered to be less trustworthy.
- ❹ **Properties** - Shows information about the selected certificate.
- ❺ **Delete** - Delete the selected certificate.
- ❻ **Create a Certificate signing request** - This is the encoded data that contains the necessary information for issuing the certificate.
 - ⚙ When creating the CSR (Certificate Signing Request), they must be filled in.
- ❼ **Install Certificate** - Install Certification
- ❽ **CA Certificate** - Shows the installed CA certificates.
- ❾ **Install CA Certificate** - Install Certification. See the detail page.
- ❿ **Properties** - Shows information about the selected certificate.
- ⓫ **Delete** - Delete the selected CA certificate.

Set up - Security Set up

Certificates Configuration

CERTIFICATES CONFIGURATION

Create Self-Signed Certificate

1 Certificate Name

2 Expires On mm/dd/yyyy ~01/18/2038

3 Country US

4 State Or Province

5 Locality

6 Organization

7 Organization Unit

8 Common Name 192.168.1.14

9 RSA 4096

10 SHA 256

11 Alternative Hostname1

12 Alternative Hostname2

13 Alternative IP

14 OK

15 CANCEL

Install Certificate

☒ Certificate From Signing Request

☐ Certificate And Private Key

Certificate Name

Certificate File [Select File](#)

OK CANCEL

Install CA Certificate

Certificate Name

Certificate File [Select File](#)

OK CANCEL

Detail for Creating a Self-Install Certification.

- 1 **Certificate Name:** enter a name or label to identify the certificate. Do not use spaces.
- 2 **Expires on:** set an expiration date for the certificate. This setting will determine how long the certificate will remain valid before it will need to be replaced.
- 3 **Country:** enter the country where the camera is installed.
- 4 **State or Province:** enter the state or province where the camera is installed.
- 5 **Locality:** enter the name of the city where the camera is installed.
- 6 **Organization:** enter the company name.
- 7 **Organization unit:** enter a company department.
- 8 **Common Name:** by default, the IP address of the camera will be used. If a DNS server will be used when connecting instead, you can enter the common identifier here. For example, the domain of “*digital-watchdog.com” could be used when connecting through HTTPS if it was registered on DW’s server.
- 9 **RSA:** this represents the level of security for the public-key cryptography algorithm. By default, the setting is set to 4096-bit encryption and cannot be changed.
- 10 **SHA:** this represents the level of security for the Secure Hash Algorithm (SHA) that is used for hashing data and certificate files. By default, the SHA is set to 256-bit encryption and cannot be changed.
- 11 **Alternative Hostname 1:** enter the alternate domain or host for this certificate. For example, “.digital-watchdog.local” can be used if the domain has been registered on a DNS server.
- 12 **Alternative Hostname 2:** enter an alternate domain or host for this certificate.
- 13 **Alternative IP:** by default, the Alternative IP is set to the IP Address of the camera. You can enter the Public IP Address of the network here to use an HTTPS connection when connecting over WAN.
- 14 **OK** - Request installing a CA certificate.
- 15 **Cancel** - Cancel installing the CA certificate and go back to the certificate configuration.

Set up - Security Set up

Certificates Configuration

CERTIFICATES CONFIGURATION

Create Self-Signed Certificate

Certificate Name

Expires On ~01/18/2038

Country

State Or Province

Locality

Organization

Organization Unit

Common Name

RSA

SHA

Alternative Hostname1

Alternative Hostname2

Alternative IP

Install Certificate

☒ Certificate From Signing Request

☐ Certificate And Private Key

Certificate Name

Certificate File

Install CA Certificate

Certificate Name

Certificate File

Detail for Install Certification.


- ① **Certificate From Signing Request** - Select to install a signed certificate returned from the CA.
- ② **Certificate And Private Key** - Select to install Certificate And Private Key to install a certificate and private key.
- ③ **Certificate Name** - Enter a unique name to identify a certificate.
- ④ **Select File** - Choose the certification file.
- ⑤ **OK** - Request installing a certificate.
- ⑥ **Cancel** - Cancel the certificate installation and go back to the certificate configuration.

Detail for Install CA Certification.

- ⑦ **Certificate Name** - Enter a unique name to identify the CA certificate.
- ⑧ **Select File** - Choose a CA certification file.
- ⑨ **OK** - Request installing a CA certificate.
- ⑩ **Cancel** - Cancel installing the CA certificate and go back to the certificate configuration.

Set up - Security Set up

Auto Lock

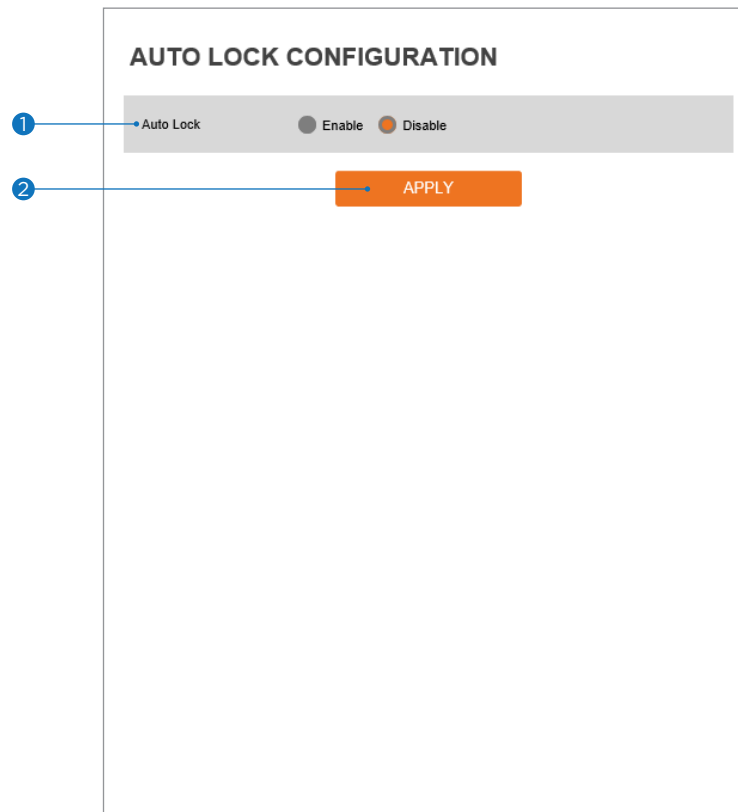

- ❶ **Auto Lock** - Turn on or turn off the Auto Lock function. When enabled, the system will lock itself for five (5) minutes after three (3) failed login attempts.
- ❷ Click 'Apply' to save all settings.

Set up - System Set up

System Information

SYSTEM INFORMATION

1 Device Name

2 Location

3


Model Name	IPA365-FR
Serial Number	N200BA5E7
Manufacturer	VCA
Max Resolution	2592x1944
Max Framerate	30 fps
Photo Resistor(CDS)	SUPPORTED
Alarm In	SUPPORTED
Relay out	SUPPORTED
Audio	SUPPORTED
Optical Zoom	NOT SUPPORTED
Digital Zoom	NOT SUPPORTED
PTZ	NOT SUPPORTED
AI	SUPPORTED
ONVIF	Version: 23.06 Profile: S

System Capability information.

- 1 **Device Name** - You can define the device name.
- 2 **Location** - You can define the device's location.
- 3 Click 'Apply' to save all settings.

Set up - System Set up

System Diagnostics

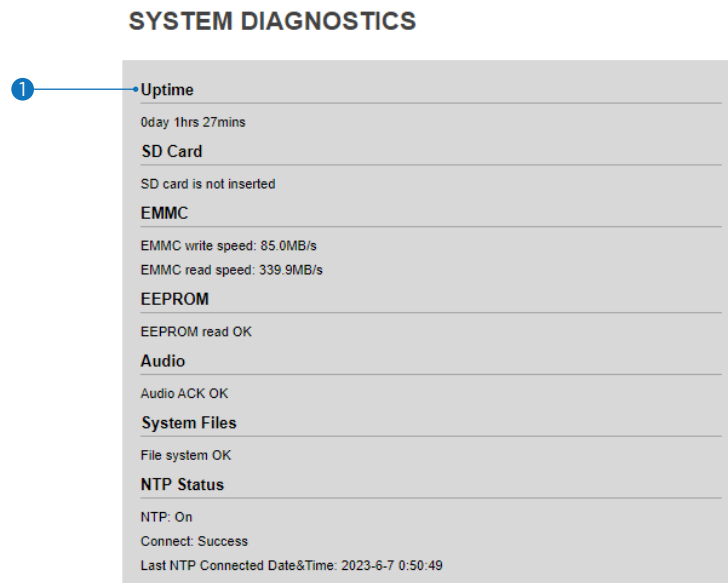

Shows basic hardware functions after inspection.

① Shows Uptime, SD card, EMMC, EEPROM, Audio, System Files, and NTP Status.

⚠ Warning:

If the camera connection is terminated abnormally, a download button will appear on the diagnostics page to download and check the error information.



Set up - System Set up

Configuration Backup

CONFIGURATION BACKUP

1. Use only if the firmware system version is the same.
2. The following items are not supported.
Network settings related functions, certificates related functions, user management.

1 Mode

2 Backup Key

3 Select File

Download Upload

Select File

APPLY

Use this page to import or export the camera settings.

- 1 Select to download or upload camera settings.
 - ⚠ The following settings are NOT included in the backup files: Network (except RTSP information), System > user management, and PTZ settings (on PTZ models).
 - ⚠ Download: save the camera's current settings. Check the box next to 'Download,' enter a backup key and click APPLY. The backup key can be of any value. Remember the backup key. It will be required when uploading the file.
 - ⚠ Upload: upload configuration settings from another camera. Check the box next to 'Upload.' Enter the backup key for the configuration backup. Click 'Select File' to locate the configuration backup file and select it on your computer. The file name and upload status will appear. Click 'Apply' to start the upload. A popup window will appear when the configuration upload is complete.
- 2 **Backup Key** - To set the certification key for setting file backup. For the backup key set when downloading, you must enter the same key when uploading.
- 3 **Select File** - To upload previously exported settings, click 'Select File' and select the file 'pconf_enc.tar.' Click 'Apply.'

⚠ **NOTE:**

The configuration backup download is available when accessing the camera directly from the web browser. If accessing the camera from the DW Spectrum IPVMS client, this feature is disabled.

Set up - System Set up

Firmware Update

FIRMWARE UPDATE

1. Do not power off during update. It may cause fatal system damage.
2. If Internet Browser was closed abnormally or a user closed it accidentally while uploading firmware file, please try again after 30 seconds.
3. Please do not select other menus while updating firmware file.

① **Version Information**

System	2023.04.12_A15.3.3
Camera	-

② **Web update**

Firmware File

③

FTP user information

FTP Server Address	<input type="text" value="ftp.dwcc.tv"/>
FTP Port	<input type="text" value="21"/>
User ID	<input type="text" value="dwmpic"/>
Password	<input type="password" value="*****"/>
FTP Upload Path	<input type="text" value="/"/>

① **Version Information** - It shows the current Firmware Version in the system.

② **Web Update** - Select the Firmware file on your computer by clicking the [Select file] button.

③ **Start F/W Update** - Click this button to start the update. Progress of uploading will be displayed using the Progress Bar. An error message will be shown if you assign the wrong file name.

Warning:

1. Do not turn off the power to the camera during the firmware update. Interrupting the update may cause the system to become unstable. Once the update is completed, the system will reboot automatically.
2. Make sure to check the 'Notice' shown on the screen.
The camera will reboot and show the login window if the firmware update is completed successfully.

Set up - System Set up

Date & Time Settings

DATE&TIME SETTINGS

1 Time Zone Setup

Time Zone (GMT-08) Pacific Time (US & Canada), Baja California ▼

APPLY

2 Date Format

Date Format mm/dd/yy ▼

Hour Clock Format 12H ▼

APPLY

3 Current Date & Time

Date & Time 06/07/2023 01:19:45am

New Camera Date & Time

4 ☐ Synchronize with my computer

Date & Time 06/07/2023 05:19:46pm

5 ☐ Setup manually

Date 2005 ▼ 01 ▼ 01 ▼

Time 00 ▼ 00 ▼ 00 ▼

6 ☒ Synchronize with time server (NTP)

NTP Server pool.ntp.org ▼

7 APPLY

- 1 **TimeZone Set up** - Choose the time zone for the camera. It will be activated after clicking the 'Apply' button.
⚠ Before setting below 'New Camera Date and Time,' set the correct time zone first.
- 2 **Time Format** - Select the time format yy-mm-dd or mm/dd/yy.
- 3 **Current Date and Time** - Current date and time setting in the camera.
- 4 **Synchronize with my computer** - Set the date/time using those of the PC currently connected.
- 5 **Set up manually** - Set the date/time by typing manually.
- 6 **Synchronize with time server (NTP)** - Choose the time server to connect to the current camera.
The date and Time will be updated automatically every hour when connected.
- 7 Click 'Apply' to save all settings.

Set up - System Set up

DST Settings

DST SETTINGS

1 **General Setting**
☐ Off ☒ On

2 **Date&Time Settings**
Start Time: Mar ▼ Second ▼ Sun ▼ 2 ▼ o'clock
End Time: Nov ▼ First ▼ Sun ▼ 2 ▼ o'clock


3 **APPLY**

Daylight Saving Time (DST) is the practice of turning the clock ahead as warmer weather approaches and back as it becomes colder again.

- 1 **General Setting** - Turn on or turn off the DST function.
- 2 **Date and Time Settings** - Set the start time and end time that the DST applies.
- 3 Click 'Apply' to save all settings.

Set up - System Set up

Users Management

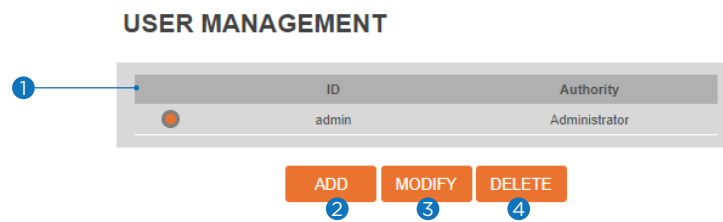

1 **Users** - List all the user accounts for authentication.

2 **Add** - Register a new user.

ID	Enter a new user ID. Admin already exists.
Password	Enter the user password. (Check the password)
Retype Password	Enter the user password again for verification.
Password Hint	Enter the password hint.
User Authority	Select Operator or Viewer. Viewer: Only monitoring is allowed. Operator: Most of the functions are allowed except 'Set up'.

- ⚠ The ID and Password are limited to 8 characters with at least two combinations of uppercase letters, lowercase letters, numbers and special characters.
Acceptable special characters are ~ ! \$ ^ () _ - { } [] ; . ? /

Click 'Apply' to save all settings.

- ⚠ Click 'Cancel' to return to the previous menu.

3 **Modify** - Modify the information of the user accounts registered. For the admin account, only the password can be modified.

4 **Delete** - Delete the selected user account. The admin account cannot be deleted.

Set up - System Set up

System Log

SYSTEM LOG

1 **Filter**

☐ Date 06/07/2023 ~ 06/07/2023

☐ Time 0 0 ~ 0 0

☐ Type All

☐ Sort Ascending

2 **REFRESH** **FILTER** **BACKUP**

3 **List**

Date & Time	Log	IP
06/07/2023 01:21:11am	Login Fail	192.168.3.57
06/07/2023 01:21:09am	Login Fail	192.168.0.201
06/07/2023 01:21:06am	Login Fail	192.168.0.211
06/07/2023 01:20:59am	Login Success	192.168.2.160
06/07/2023 01:20:51am	Login Fail	192.168.0.211
06/07/2023 01:20:50am	Login Fail	192.168.0.201
06/07/2023 01:20:43am	Login Success	192.168.2.160
06/07/2023 01:20:39am	Login Fail	192.168.3.57
06/07/2023 01:20:36am	Login Fail	192.168.0.211

1 2 3 4 5 6 7 8 9 10

1 **Filter** - Select a date, time, sort, or type of log to filter the log.

2 Click the 'Refresh' button to refresh the log list.


⌘ Click 'Filter' to view the filtered log.

⌘ Click 'Backup' to back up the filtered log.

3 **System Log List** - The filtered log is displayed.

Set up - System Set up

Factory Reset

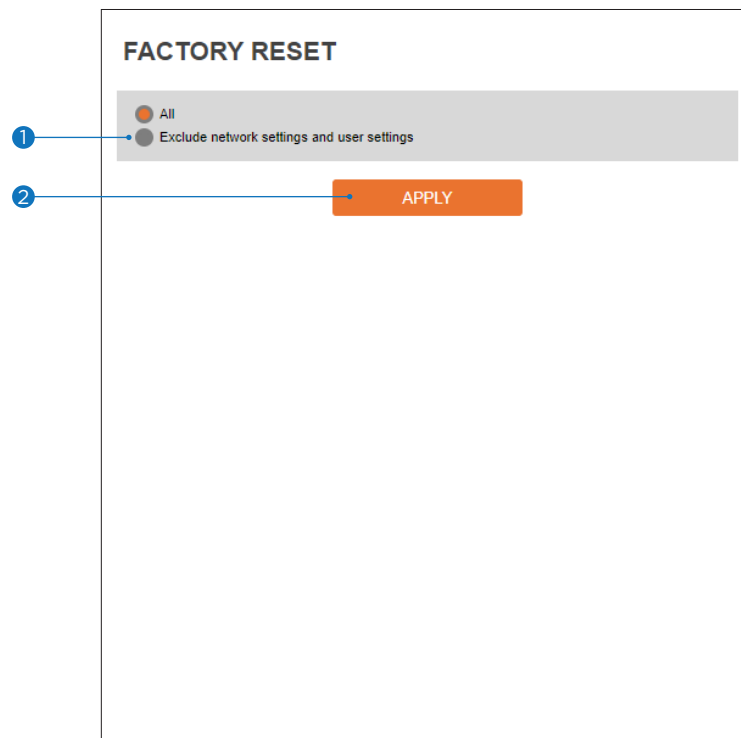


- ① **Reset to the factory defaults** - Return the setup to the factory default.

All - Reset all Settings to the factory defaults.

Exclude Network Settings and User Settings - Reset all camera settings to factory default except for the network settings.

- ② Click 'Apply' to save all settings.

Set up - System Set up Restart

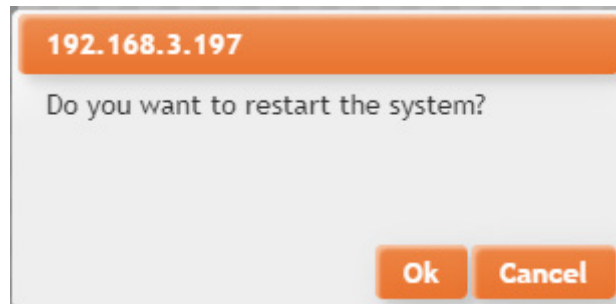

If you click the 'RESTART' menu, a message box will be shown to confirm. Click the 'OK' button to restart.

Set up - System Set up

System Open Source License


SYSTEM OPEN SOURCE LICENSE

Open Source Name	Version	License
busybox	1.32.0	GPLv2
alsa-lib	1.1.6	GPLv2.1
libglib2	2.64.3	LGPLv2
libgnutls	3.6.11.1	LGPLv2.1
libjson-c	0.13.1-20180305	JSON License
libcurl	7.64.0	MIT/X derivate License
libffi	3.1	MIT License
libgcrypt	1.7.3	LGPLv2.1
libnl	3.5.0	LGPLv2.1
libogg	1.3.4	BSD-style License
libsamplerate	0.1.8	GPLv2
libselinux	3.0	Public domain
libsndfile	1.0.27	LGPLv2.1
libssh2	1.9.0	BSD
libtasn1	4.13	GPLv2.1
libxml2	2.9.10	LGPLv2.1

This menu lists all the System Open Source License information in the camera, including Open Source Name, Version, License, etc.

Set up - System Set up

Plug-In

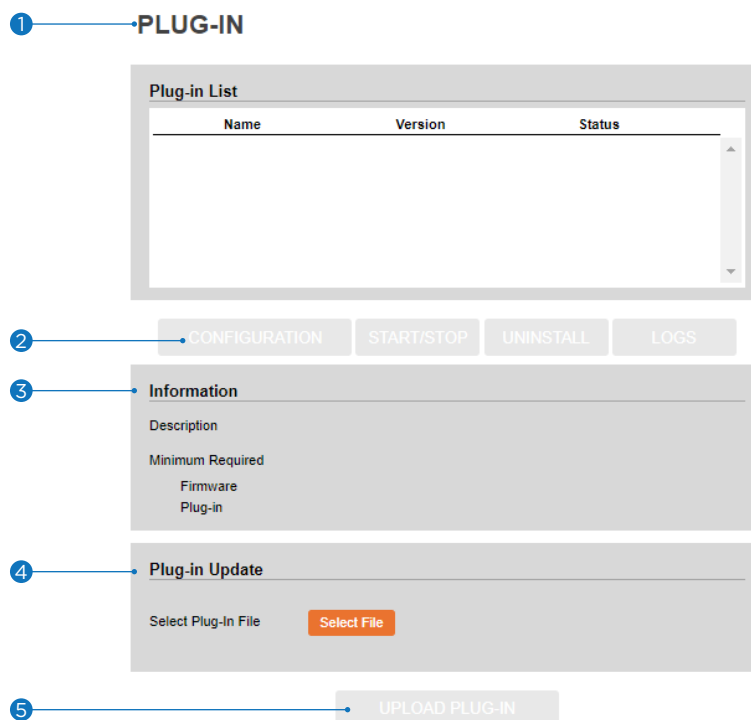

1 Plug-in List - View all plug-ins currently installed on the camera.

2 Configuration - You can access the plugin setting page using the configuration button.

Start/Stop - Turn on or turn off the selected plug-in.

Uninstall - Remove the selected plug-in from the list.

Logs - Download the log file for the selected plug-in.

3 Information - View additional information for the plug-in selected from the list.

4 Plug-in Update - Press the 'select file' button to upload a new plug-in file on your drive once a plug-in is selected from the list.

⚠ Note the available local storage on the camera before updating a plug-in. You may need to remove some plug-ins to have enough storage for a new plug-in.

5 Upload Plug-In - Once a new plug-in file is selected, click the 'UPLOAD PLUG-IN' button to start the update. The Progress Bar will indicate the uploading progress.

⚠ See the MEGApix® Ai™ user manual for more information on the analytics plug-ins, settings and activation.

Network Set up - Quick Start of Network Connection

Follow the steps below to complete the initial network setup.

- i** Do not power on the IP camera until instructed.
- i** Temporarily turn off any proxy servers configured in Internet Explorer.
- i** If connecting the IP camera directly to a modem, power down and reset the modem. Leave the modem powered down until the camera's configuration is complete and the IP Camera has been connected to the modem.

- 1 Connect the IP camera to the configured network.
- 2 Open the DW IP Finder on a PC on the same network as the camera and search for the camera.

- i** If you have a DHCP server, it will automatically set the camera's IP address and network settings.
- i** If you do not have a DHCP server, the camera's IP address is set by default to 192.168.1.80 after one minute. In this case, the PC's IP address must be changed to match the camera's IP address settings to be able to access the camera.

- 3 If multiple cameras are added simultaneously, each camera can be identified by its Mac address.
- 4 Click on the camera's IP address and connect to the web page.
- 5 The default ID/password are both 'admin'.
- 6 Familiarize yourself with the viewer interface.
- 7 Install VLC to display live video.
- 8 The IP address settings can be set to 'STATIC' from the DW IP Finder or the camera's web viewer by going to Setup -> Network -> Network Settings.
- 9 If the IP camera is connected to a network with a router, you must have port forwarding configured on your router to access the camera from outside the network.
- 10 After configuring port forwarding on your router (if necessary), access your IP camera by opening Internet Explorer and typing the IP address and web port assigned to the IP camera.

- i** Example: <http://192.168.0.200:8888>
- i** If your web port is 80, you do not need to specify the port in the address bar to access to your IP camera.

- 11 Access your IP Camera via the Internet (from a different network from the one your camera is on):

If you use a static IP address assigned by your ISP:

1. Open Internet Explorer.
2. Type the address of the IP camera.
3. If you use a router, enter the router's static IP and the web port number of the IP camera.

If you have a dynamic address provided by your ISP

1. Open Internet Explorer and go to your DDNS website.
2. Register the IP camera.
3. Reboot the IP camera.
4. Give the DDNS server 10 minutes to locate your IP camera's IP information.
5. Click the refresh button in Internet Explorer.
6. After your camera is connected, select your camera.

Network Set up - DDNS Registration

If you have a DYNAMIC IP service from your Internet Service Provider (ISP), you cannot tell the current IP address of the IP Camera. To solve this problem, you must register with our DDNS service.

First, you must check if you are using dynamic addressing. Register your IP Video Server on our DDNS website before you configure, set up, or install the IP Camera.

Even though your IP is not dynamic, you will benefit by registering your device with a DDNS service. In this case, remember 'hostname.dyndns.com/gate1' instead of a complicated series of numbers like `http://201.23.4.76:8078`.

For more details, contact our Support Center.

❏ To use a public DDNS called 'DynDNS' or 'no-IP,' refer to the detailed information on how to use the service. (Visit: <http://www.dyndns.com> or <http://www.no-ip.com>)

Network Set up - Guide to the Network Environment

Please configure the IP Camera at the installation site. Determine your network scenario to configure the IP Camera with the proper TCP/IP settings.

This tutorial will guide you through the process. Before actually configuring the IP Camera, determine the settings to be applied. Record those settings to be used to configure your IP Camera for reference.

When configuring your IP Camera, treat the IP Camera as another PC on your network. You will assign it to several addresses and other TCP/IP properties to match your current network.

This step-by-step tutorial will teach what IP addresses and network configurations should be assigned based on the network scenario.

- 1 Before you begin, locate any information and settings received from your Internet Service Provider (ISP). You may need to refer to these IP addresses later during the configuration.

Current TCP/IP Settings	
IP Address	
Subnet Mask	
Default Gateway	
Primary DNS Server	
Secondary DNS Server (Option)	

Static ☐ Dynamic ☐

- i** If you were not given any IP addresses or the ISP was responsible for the set up and installation of your Internet connection, go to step 2.
- i** If you are not using a router on your network, your 'Current TCP/IP Settings' (from the previous section) and 'Assigned IP Addresses from My ISP' will be exactly the same.


- 2 Determine whether the IP address is STATIC or DYNAMIC. Contact your ISP to get a STATIC IP address for the camera.
- 3 Configure your IP Camera's TCP/IP settings for network connectivity by selecting Set up from the main interface and selecting TCP/IP located on the left of the setup screen.

- 4 Use 'admin' for both entries if prompted for ID and password. The default web port number is 80. If the ISP blocks port 80, use a value between 1025 ~ 60000. If TCP port 80 is blocked, contact your ISP.
- 5 The following descriptions are several basic network scenarios. Determine which scenario describes your network. If your network does not match one of the scenarios below and you are unsure how to set up your IP camera, contact your network administrator.


i You cannot control the rectangular gray areas and only the ISP has access to the devices.

Network Set up - Set up Case A, B

Case A: Dynamic IP + Personal Router [Most SOHO]

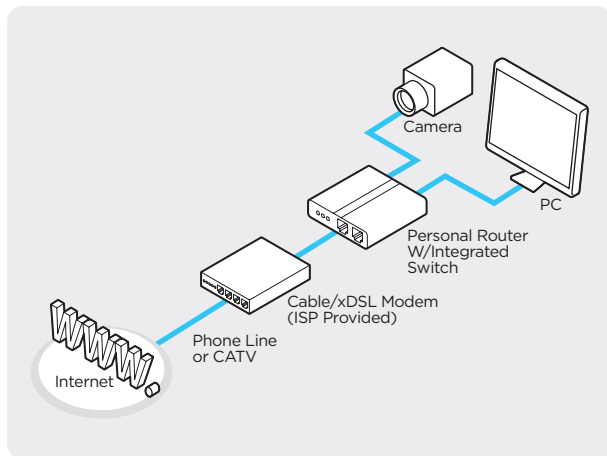

Case B: Static(Fixed) IP + Personal Router [Efficient]

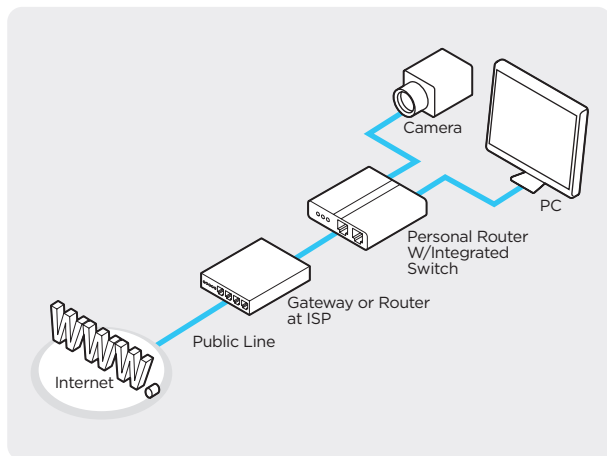

Configure your IP Camera's TCP/IP properties:

1 Network Type: STATIC (even though you have Dynamic IP from your ISP, use STATIC on the IP camera).

2 Internet Address: A private IP address such as 192.168.0.200 (example)

i You need to assign an IP address to the IP Camera just as you do with PC.

i The IP address you assign must be unique to your network and match your network as well.

For information on how to choose a unique IP and match your network, read the FAQ.

i The IP address you assign must be a private IP. For information on how to choose a private IP please, read the FAQ.

3 Subnet Mask: 255.255.255.0 (example)

i You must use the same subnet mask as the one you noted under 'Current TCP/IP Settings.'

4 Default Gateway: 192.168.0.1 (example)

i This IP address must be the IP address of your router. (private or LAN side)

i Use the same Default Gateway you noted under 'Current TCP/IP Settings.'

5 Preferred DNS Server: Use the 1st DNS Server from 'Assigned IP Address from My ISP.'

i If you did not receive any IP addresses from your ISP, contact the ISP and acquire the IP address of their DNS server.

6 DDNS Server: Use the DDNS server.

i This is the same site you will register later to accommodate dynamic IP from your ISP.


7 Web Port: 8888

i Do not use the default port 80 as this number must be changed.

i Select a number between 1025 - 60000.

Network Set up - Set up Case C, D

Case C: Static(Fixed) IP [Dedicated line directly to the IP Camera]

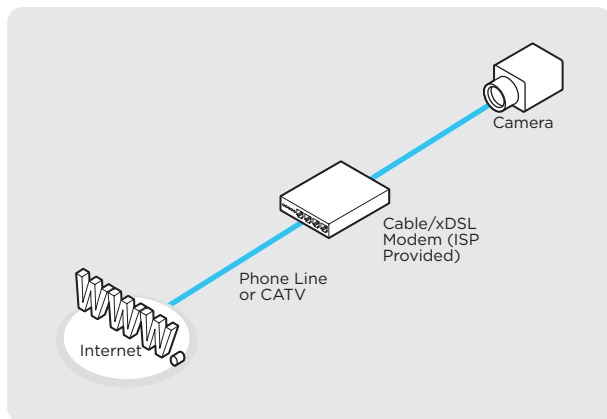

Configure your IP Camera's TCP/IP properties:

- 1 Network Type: STATIC
- 2 Internet Address: A static IP address received from your ISP, such as 24.107.88.125 (example)

i You need to assign an IP address to the IP Camera just as you do with PC.

- 3 Subnet Mask: Subnet mask assigned from your ISP such as 255.255.255.240 (example)

- 4 Default Gateway: 24.107.88.113 (example)

i Use the assigned default gateway from your ISP.

- 5 Preferred DNS Server: Use the 1st DNS Server from 'Assigned IP Address from My ISP.'

i If you have not received any IP addresses from your ISP, contact them to acquire the IP address of their DNS server.


- 6 DDNS Server: Use the DDNS server

i This is the same site you will register later to utilize our DDNS service.

- 7 Web Port: 80

i Select a number between 1025 - 60000.

Case D: Dynamic IP + DSL/Cable Modem [Connected directly to the IP Camera]

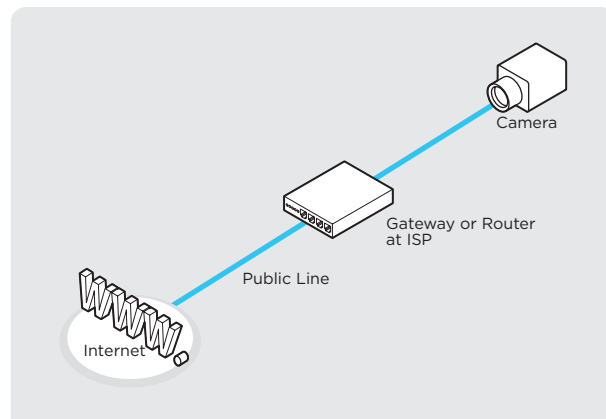

i To connect the IP Camera directly to a modem, power down and reset the modem. Leave the modem powered down until the IP camera's set up is completed and the IP camera has been connected to the modem. Then power on the modem, followed by the IP camera.

Configure your IP Camera's TCP/IP properties:

- 1 Network Type: DYNAMIC
- 2 DDNS Server: Use the DDNS server

i This is the same site you will register later to accommodate dynamic IP from your ISP.

- 3 Web Port: 80

i Select a number between 1025 - 60000.

Network Set up - Port Forwarding

After entering the correct TCP/IP settings, you are ready for 'Port Forwarding.'
(Cases A, B).

- 1 Use the table below to note your camera's TCP/IP settings for future reference. You may need this information to access your IP Camera and to configure 'port forwarding.'

IP camera TCP/IP settings	
IP address	
Subnet mask	
Default gateway	
Preferred DNS server	
DDNS server	
Web port	

- 2 After clicking 'Apply,' the system will prompt for a reboot. Please allow the system 50 seconds to reboot and accept the changes. After 50 seconds, close the configuration screen. The view will display 'Trying to Reconnect.'
If the ACTIVE light on the IP Camera has gone off and is now back on again flashing, the IP Camera has rebooted. After the system reboots completely, remove the power supply from the unit and close Internet Explorer.
- 3 Return your PC/Laptop TCP/IP properties to their original settings.
- 4 Before installing the IP camera, you must perform port forwarding on your router (Cases A, B).
You will need to forward one port:
 - Web Port: All the ports will be forwarded to the IP address you assigned to the IP Camera.
In the example above, you would forward:
 - 8888 > 192.168.0.200

Network Set up - Starting IP Camera

After forwarding the web port correctly through your router (if applicable), install the IP Camera in a proper location.

- ① Locate the serial number on the label attached to the bottom of the IP camera. You will need this for DDNS registration.
- ② Connect the IP Camera to your router or cable/DSL modem (per your network scenario) via a Cat5/5e UTP Ethernet network cable.
- ③ Supply power to the IP camera.
- ④ After 1 minute, verify the IP camera indicators: LINK: Flickering/Solid.
- ⑤ After configuring port forwarding on your computer (if necessary), access your IP camera on your local network by opening Internet Explorer and specifying the IP address and web port assigned to the IP camera.

i Examples: `http://192.168.0.200:8888` or `http://24.106.88.123`

i If you left your web port as 80, you do not need to specify the port in the address bar to access the IP camera.

- ⑥ Access your IP camera via the Internet:

If you use cases B, C:

1. Open Internet Explorer.
2. Type the address of the IP camera.
3. If you use a router, enter the router's static IP and the web port number of the IP camera.

If you use cases A, D:

1. Open Internet Explorer and go to your DDNS website.
2. Register the IP camera.
3. Reboot the IP camera.
4. Give the DDNS server 10 minutes to locate your IP camera's IP information.
5. Click the refresh button in Internet Explorer.
6. After your camera is connected, select your camera.

i The difference between B and C is that B needs to set the port forwarding.

i Since the type of DDNS differs from the service type, refer to the related service site.

Appendix

FAQ

1. My POWER light is not on?

Power is not being supplied to the unit. Please use the power supply shipped with the unit and verify that a power source is active from the attached power outlet used to connect the adapter. You can test this by plugging in any other electrical device and verifying its operation. After using the power supply shipped with the product, checking the power source, and reinserting the power connector into the IP Camera, please call our Support Center. The power supply may be defective.

2. My ACTIVE light is not flashing?

Verify the power supply to the unit. Power off the unit and back on again. Wait for one (1) minute. If the ACTIVE light still does not begin to flash, you will have to set the unit to its factory default (THIS WILL DELETE ANY CONFIGURATION AND SET THE UNIT TO THE FACTORY DEFAULTS). Power on the unit and insert the end of a paper clip into the small recessed opening on the back of the unit. Use the clip to press the button located within that opening.

3. My LINK light is not flashing or solid?

Verify the cable connection. 99% of the time, the cable's connection to the unit is causing this problem. Try using a different network or crossover cable (for PC connection only). Try reinserting the cable. If this does not solve the problem, call our Support Center.

4. I can access the video server on my LAN, but not from the Internet.

Verify that your router (if applicable) has port forwarding properly configured. If accessing from our DDNS service, verify the correct serial number. Firewall issues may prevent user access.

5. How do I open an MS-DOS or Command Prompt?

Start > (All) Programs > Accessories > Command Prompt

6. How do I find my IP address information if my settings are automatically detected?

- 1) Open a Command Prompt.
- 2) At the prompt, type - "ipconfig / all" (without the quotes)
- 3) Near the end of the information supplied should be your current IP address, subnet mask, default gateway and DNS servers.

7. I can't connect!!

In the case of a connection failure.
Modem Reboot > Modem Reboot Finished > Router Reboot > Router Reboot Finished > IP Camera Reboot > IP Camera Reboot Finish > Verify DDNS and IP Camera connection, if applicable.

8. How do I "PING" an IP address?

- 1) Open an MS-DOS (or Command) prompt.
- 2) At the prompt, type - "ping xxx.xxx.xxx.xxx" (without the quotes and replace the "x" s with an IP address).
- 3) Press Enter.

9. I'm accessing my video server remotely over the Internet, and the video stream is choppy, is this normal?

Yes. The frames per second received remotely are determined by your bandwidth capabilities at your site where the IP Camera is installed and your remote location. The lower of the two sites will determine how fast your video stream is received. It is recommended that there be at least a 256Kb/sec upstream connection from the site where the IP Camera is installed. Lower speeds will operate properly but provide poor remote performance. The Faster the Internet connection at both ends, the faster the video stream.

10. How do I enable or check VLC on my browser?

Internet Explorer

Open Internet Explorer > Tools on the menu bar > Internet Options > Security Tab > Custom Level > Scroll down and verify that you are prompted or have enabled plug-ins to be downloaded and executed. > click OK > restart browser.

Chrome


Open Chrome > Chrome menu settings > Advanced settings > Individual information - content settings > Run automatically.

11. How do I reset the unit to factory defaults?

Refer to the previous functions page and find the reset button. Power ON the unit and push the reset button within that opening with a paper clip. You should then see the ACTIVE light turn off, and after a few seconds, the ACTIVE light will begin to flash, signifying a successful reboot. If the ACTIVE light does not turn on after depressing the reset button, please try holding the button in for a few seconds and releasing it. YOU WILL LOSE ALL DATA THAT HAD BEEN ENTERED PREVIOUSLY, AND THE IP CAMERA WILL BE SET TO FACTORY RESET.

Appendix - Dimension

Unit: inches (mm)

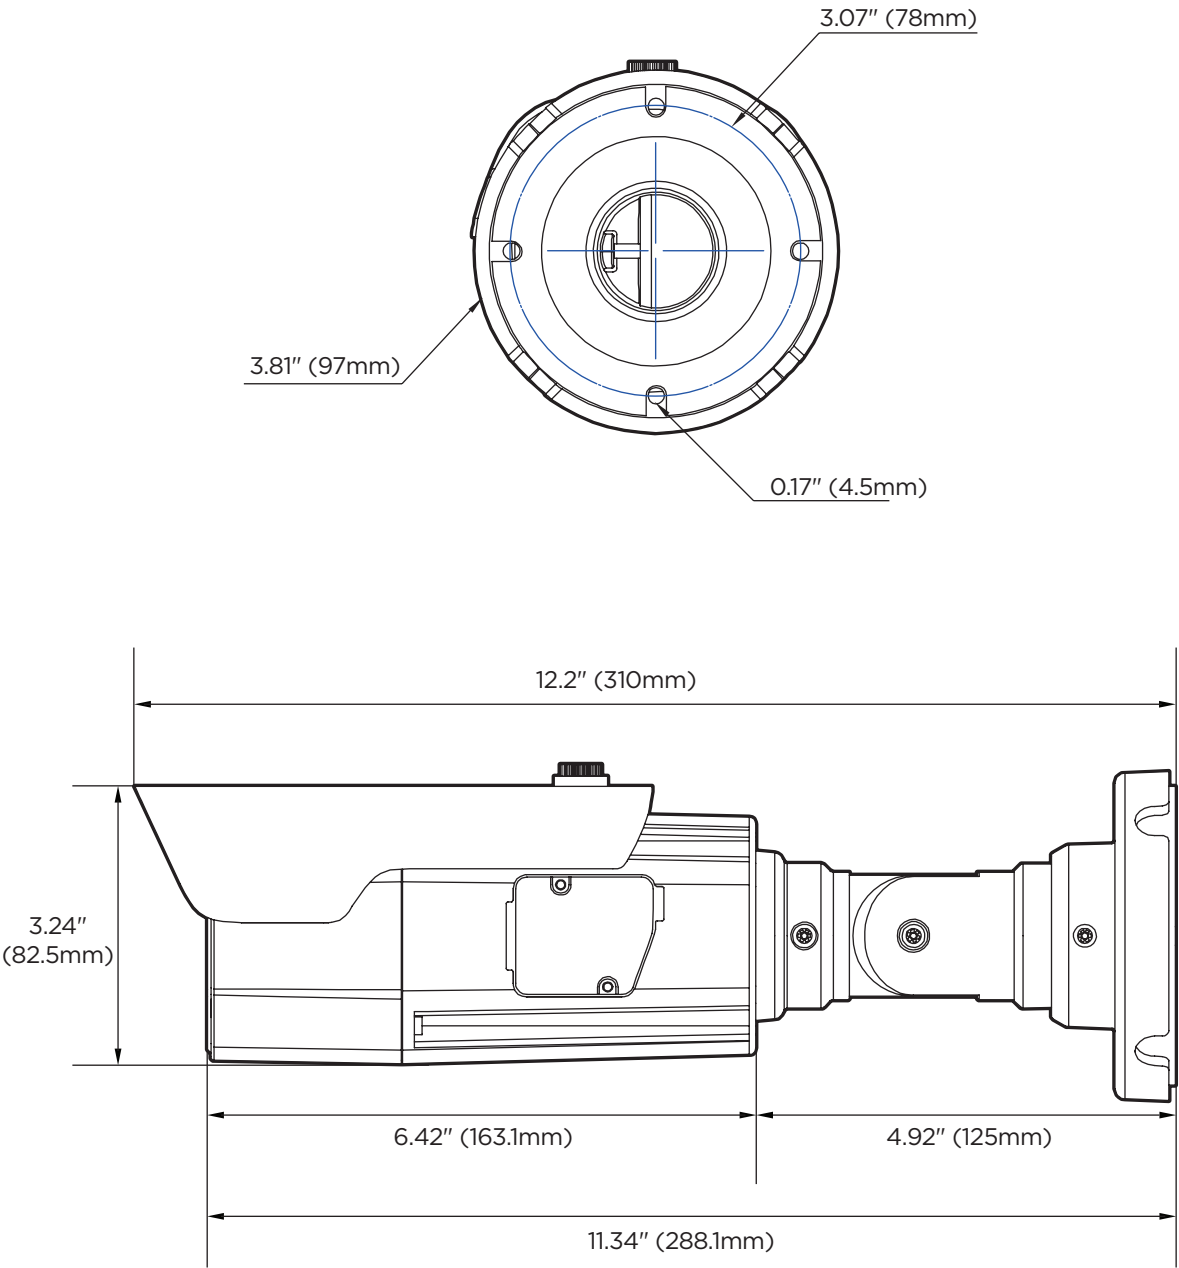

Appendix - Product Specifications

IMAGE		DWC-XSBA08MiC1	DWC-XSBA05LiPC1
Image sensor	4K 1/2.8" CMOS sensor		1/2.8" 5.69MP CMOS sensor
Total pixels	3864(H) X 2228(V)		2704(H) X 2104(V)
Active pixels	3840(H) x 2160(V)		2592(H) X 1944(V)
Minimum scene illumination	0.09 lux (color), 0 lux (B/W)		0.1 lux (color), 0 lux (B/W)
S/N ratio			50dB
Test monitor video output	Local video output CVBS 1.0V p-p (75Ω), 4:3 aspect ratio		
LENS			
Focal length	2.7-13.5mm, F1.4		6-50mm, F1.6
Lens type	Vari-focal p-iris lens with motorized zoom and auto-focus		
Horizontal Field of view (°)	HFoV: 33.1°-90.3° / VFoV: 18.9°-49°		HFoV: 6.9°-40.8° / VFoV: 5.2°-30.2°
IR distance	140ft range		130ft range
Optical zoom / digital zoom	5x optical zoom		8x optical zoom
I/O			
Audio input/output and compression	1 (1.0Vms, 3K ohm) input/1 output, G.711		1 (1.0Vms, 3K ohm) input/1 output, G.711
Alarm input/output	1 input/1 output		1 input/1 output
Event trigger	Motion alarm, network loss, temperature anomaly, illegal login, schedule, sensor detection		
INTELLIGENT VIDEO ANALYTICS			
Deep learning analytics and analytics filters	Deep Learning object tracking, Zones and lines, tamper, metadata, intrusion, line crossing, counting, counting lines, appear, disappear, stopped, enter, exit, direction, tailgating, dwell, logical rules		Optical character recognition captures and reads vehicle license plates Classify vehicles, make, model and color across numerous brands
Recognition distance day/night	---		23 - 165ft (7 - 50m) / 23 - 131ft (7 - 40m)
Vehicle speed range	---		25 - 75mph
OPERATIONAL			
Shutter mode	Auto, manual, anti-flicker, slow shutter		
Shutter speed	1/15 - 1/32000		
Slow shutter	1/2, 1/3, 1/5, 1/6, 1/7.5, 1/10		
Auto gain control	Auto		
Day and night	TDN, Auto, day (color), night (B/W)		
Digital Noise Reduction (DNR)	Smart DNR 3D DNR		
Wide Dynamic Range (WDR)	True WDR, 120dB		
White balance	Yes		
Privacy zones	16 programmable privacy masks		
Mirror and flip	Yes		
Alarm notifications	Notifications via email, FTP, alarm output and SD card recording		
Memory slot	Micro SD/SDHC/SDXC class 10 card (not included)		
NETWORK			
LAN	1000Base-T (1Gbps)		10/100Base-T
Video compression type	H.265, H.264, MJPEG		
Resolution	H.265, H.264: 3840x2160, 2592x1944, 2560x1440, 1920x1080, 1280x720, 640x480, 640x360, 352x288, 352x240 MJPEG: 1920x1080, 1280x720, 800x600, 768x432, 704x576, 704x480, 640x480, 640x360, 352x288, 352x240		H.265, H.264: 2592x1944, 2560x1440, 1920x1080, 1280x720, 800x600, 704x576, 704x480, 640x480, 640x360, 352x288, 352x240 MJPEG: 1920x1080, 1280x720, 800x600, 768x432, 704x576, 704x480, 640x480, 640x360, 352x288, 352x240
Frame rate	Up to 30fps at all resolutions		
Video bitrate	100Kbps ~ 25Mbps, multi-rate for preview and recording		
Bitrate control	Multi-streaming CBR/VBR at H.265 (controllable frame rate and bandwidth)		
Streaming capability	Dual-stream at different rates and resolutions		
IP	IPv4		
Protocol	TCP/IP, UDP, AutoIP, RTP (UDP/TCP), RTSP, NTP, HTTP, HTTPS, SSL, DNS, DDNS, DHCP, FTP, SMTP, ICMP, SNMPv1/v2/v3 (MIB-2), ONVIF		
Security	HTTPS (TLS), IP filtering, 802.1x, digest authentication		
ONVIF conformance	Yes		
Web viewer	OS: Windows, Mac OS, Linux Browser: Internet Explorer, Google Chrome, Mozilla Firefox, Safari		
Video management software	DW Spectrum		
Number of DW Spectrum CaaS licenses included	1 DW Spectrum CaaS license included		
Local server recording	1TB local memory for recording		
Max. number of CaaS cameras in the same network/system	Up to 10 MEGApix Ai CaaS cameras in the same network/system		
ENVIRONMENTAL			
Operating temperature	-40°F - 122°F (-40°C - 50°C)		
Operating humidity	10-90% RH (non-condensing)		
IK rating/ IP rating	IK10 impact-resistant, IP67-rated		
Other certifications	CE, FCC, RoHS, UL, NDAA, TAA		
ELECTRICAL			
Power requirement	DC12V, PoE (Adapter not included)		DC12V, PoE (Adapter not included)
Power consumption	DC12V: 13.2W, 1.1A, PoE: 14.8W, 0.308mA		DC12V: 13.2W, 1.1A, PoE: 14.4W, 0.3A
MECHANICAL			
Material	Aluminum die-casting bullet housing		
Dimensions	12.2" x 3.81" (310 x 97mm)		
Weight	2.64 lbs (1.2 kg)		
Warranty	5 year warranty		

Warranty Information

Go to <https://digital-watchdog.com/page/rma-landing-page/> to learn more about Digital Watchdog's warranty and RMA.

To obtain warranty or out-of-warranty service, please contact a technical support representative at 1+ (866) 446-3595, Monday through Friday from 9:00 AM to 8:00 PM EST.

A purchase receipt or other proof of the original purchase date is required before warranty service is rendered. This warranty only covers failures due to defects in materials and workmanship that arise during normal use. This warranty does not cover damages that occur in shipment or failures which are caused by products not supplied by the Warrantor or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, alteration, modification, faulty installation, set up adjustments, improper antenna, inadequate signal pickup, maladjustments of consumer controls, improper operation, power line surge, improper voltage supply, lightning damage, rental use of the product or service by anyone other than an authorized repair facility or damage that is attributable to acts of God.

Limits and Exclusions

There are no express warranties except as listed above. The Warrantor will not be liable for incidental or consequential damages (including, without limitation, damage to recording media) resulting from using these products or arising out of any breach of the warranty. All express and implied warranties, including the warranties of merchantability and fitness for a particular purpose, are limited to the applicable warranty period set forth above.

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights; you may also have other rights from state to state.

If the problem is not handled to your satisfaction, then write to the following address:

Digital Watchdog, Inc.
ATTN: RMA Department
16220 Bloomfield Ave
Cerritos, CA 90703

Service calls which do not involve defective materials or workmanship as determined by the Warrantor, in its sole discretion, are not covered. Cost of such service calls are the responsibility of the purchaser.

